

USER MANUAL OFF-ROAD CRAWLER NO.EX86130



ROCK CRAWLER



 **WARNING:**
This product is only for 14 years old or above

Notes:

- ⇒ Read and understand the instructions carefully before operating or assembling your racing model.
- ⇒ Specifications are subject to change without prior notice, and actual received model may vary from the images and/or descriptions in this manual.

Remote control models are specialized and high-value products. If you identify any quality defects upon receipt, please do not use the product and contact the seller immediately to arrange a replacement or return. Please note that we cannot provide any after-sales guarantee for damages which are caused by improper use.

The product conforms to technical requirements of export safety regulations.



Please read and follow all the instructions in the manual before use.

MADE IN CHINA

Factory Address: Huang Jiang Town, Dong Guan City, Guang Dong Province, China

Production Date: refer to packing instruction



Introduction

We would like to welcome you to the world of remote control cars. What are RC cars? The simple answer is that they are radio controlled cars that respond precisely to your command. The more complete answer is that they can be a great addition to your lifestyle. RC car building and racing teach valuable mechanical and electrical skills, promote teamwork and encourage racers to test their skills with other racers from around the world. Whether you are just having fun racing your car in your backyard or racing at the world competition contest, radio controlled car racing is a great hobby.

We have been making RC products aimed at making our hobby fun and exciting with an affordable price. We are confident that your experience with our products will be positive. Of all the radio controlled models out there, no question about it, RC cars are the hardest to operate. This user manual covers a wide range of topics from nitro powered remote control cars to electrical powered remote control cars. We highly recommend that you read this user manual thoroughly and carefully before assembling and operating. Please follow all precautions and recommendations located within the manual. Be sure to retain the manual for future reference, routine maintenance, and tuning.

This product is not a toy. It is not recommended for children under 14 years old and any minor should be accompanied by an adult when operating. This product is a precision machine that requires proper assembly and setup to avoid accidents. Failure to take caution when operating this product may result in serious injury or property damage. It is the owner's responsibility to operate this product in a safe manner. Manufacturer and its distributors are not responsible in any way for any and all bodily injury(s) and/or property damage that may occur from the use of or caused by in any way of this product.

Warnings

- The product is not intended for those under 14 years of age without proper adult supervision. The product is not a toy. It is a precision machine requiring proper assembly and setup to avoid accidents and it is the responsibility of the owner to operate this product in a safe manner as it can cause serious personal injury and damage to property due to carelessness or misuse.
- Do not attempt to disassemble or modify any of the product components without the assistance of an experienced RC user.
- Only use the correct type of battery to operate. Using any wrong type of battery will damage the product and possibly make it dangerous to operate.
- The motor(s) may get hot during use. Always allow the motor 10 - 15 minutes to cool down between each operation. This will prolong the life of your product.
- Choose an appropriate operating site consisting of flat, smooth ground, and clear open field. Do not operate near buildings, high voltage cable lines, or trees to ensure safety operation. Operate in safe area only, away from other people. RC models are prone to accidents, failures, and crashes due to a variety of reasons including, lack of maintenance, user error, and radio interference. Users are responsible for their actions and damage or injury occurring during the operation.
- Do not operate in inclement weather, such as rain, wind, snow or darkness.
- The product, composed of precision electrical components, must be kept away from moisture and other contaminants. Do not allow them to get wet. Electrical damage may occur that could affect safe operation.
- You should complete a successful pre-run check of your radio equipment and the model prior to each run.
- Use replacement parts from the original manufacturer to ensure safe product operation.
- Operate this product within your ability. Do not operate under tired condition.
- After each use, always allow the battery to cool down before recharging. When charging the battery pack, do not overcharge! If batteries get hot during charging, discontinue charging immediately and disconnect the battery from the charger. Never leave battery unattended while charging. If you are unsure of how to charge this battery, please seek the advice of experienced RC users. Never let children charge the battery without adult supervision.
- Always turn on the transmitter before connecting the battery on the model. When turning off the model, always disconnect the battery first, and then turn off the transmitter. If the order is reversed, the model may become uncontrollable and cause serious damage.
- If you are in doubt about your ability to operate the model, we strongly recommend that you seek assistance from experienced RC users or join your local modeling club to gain the required knowledge and skill. As the manufacturer and distributor, we assume no liability for the use of this product.
- Before turning on your model and transmitter, please check to make sure no one else is operating under the same frequency. Frequency interference can cause your model, or other's models to crash. The guidance provided by experienced RC users will be valuable for the assembly, tuning, trimming, and actual first flight.
- Never allow batteries to run low or you might lose control of the model.
- Plastic is very susceptible to damage or deformation due to extreme heat and cold climate. Do not store the model near any source of heat such as oven or heater. Store the model indoors, in a climate-controlled, room temperature environment.
- Never shorten the receiver antenna; or this might affect the transmitting range of the radio system.
- This product is a RC hobby model, do not use for other purpose.

Safety

Pay close attention to the following symbols and their meanings. Failure to follow these warnings could cause damage, injury or death.

- | | |
|--|---|
|  Danger | Not following these instructions may lead to serious injuries or death. |
|  Warning | Not following these instructions may lead to major injuries. |
|  Attention | Not following these instructions may lead to minor injuries. |

 Prohibited	<ul style="list-style-type: none"> ■ Do not use the product at night or in bad weather like rain or thunderstorm. It can cause erratic operation or loss of control. ■ Do not use the product when visibility is limited. ■ Do not use the product on rain or snow days. Any exposure to moisture (water or snow) may cause erratic operation or loss of control. ■ Interference may cause loss of control. To ensure the safety of you and others, do not operate in the following places: <ul style="list-style-type: none"> ● Near any site where other radio control activity may occur ● Near power lines or communication broadcasting antennas ● Near people or roads ● On any body of water when passenger boats are present ■ Do not use this product when you are tired, uncomfortable, or under the influence of alcohol or drugs. Doing so may cause serious injury to yourself or others. ■ The 2.4GHz radio band is limited to the line of sight. Always keep your model in sight as a large object can block the RF signal and lead to loss of control. ■ Do not touch any part of the model that may generate heat during operation, or immediately after use. The engine, motor or speed control, may be very hot and can cause serious burns.
 Mandatory	<ul style="list-style-type: none"> ■ Misuse of this product may lead to serious injury or death. To ensure the safety of you and your equipment, read this manual and follow the instructions. ■ Make sure the product is properly installed in your model. Failure to do so may result in serious injury. ■ Make sure to disconnect the receiver battery before turning of the transmitter. Failure to do so may lead to unintended battery issues or an accident. ■ Ensure that all motors operate in the correct direction. If not, adjust the direction first. ■ Make sure the model stays within the radio maximum signal range to prevent loss of control during operation.


Thanks for purchasing our RC car. Since the power system of the RC model can be very dangerous, please read this manual carefully. Since we have no control over the correct use, installation, application, or maintenance of our products, we shall assume no liability for any damages, losses or costs resulting from the use of this product. Any claims arising from the operating, failure of malfunctioning etc. will be denied. We assume no liability for personal injury, consequential damages resulting from our product or our workmanship.



4-3. Battery Specifications for Product

WARNING:
NO battery includes in factory. Recommend? battery: 2S~3S LIPO battery or 5-9 cells NIMH battery (please match the ESC mode with the corresponding battery type) Pay attention to the battery size and plug specification when purchasing. The maximum battery measurement is 142*48*55mm JLxWxH).

This product can use the 2S or 3S Li-Po battery.

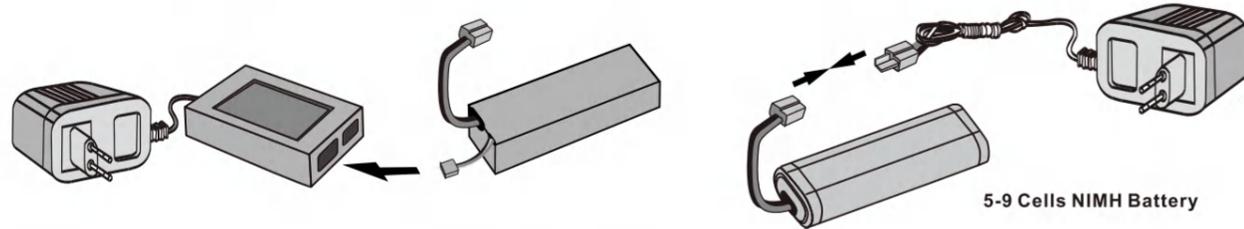

NOTICE
Please check the battery voltage before use. Please use a qualified charger to charge the newly purchased battery. (please read the charging steps in manual when necessary)

Charge the vehicle battery

- Connect charger plug with mains jack and then connect with connector of battery.
- Please be care of safety while charging, please remove charger plug from the mains jack once finish charging. will be over heat if it is too long to be charging or incorrect charging way. must stop charging if over 45 degree for the battery temperature.
- Do not charge for battery at once when you take it away from your car. Please make sure battery in cool condition before recharge battery to keep battery performance running well and get a longer use life.


NiMH Battery Instructions

- Never dispose of NiMH batteries in a fire or store near sources of heat.
- Only use the supplied NiMH charger to charge the NiMH battery. Using another charger may permanently damage the battery and surrounding components and may also lead to injury.
- Batteries should only be charged on a fireproof surface, away from any flam-mable materials.
- Never leave the battery unattended when charging or discharging.
- Batteries must be discharged or fully exhausted before being disposed of, Cover exposed poles with adhesive tape to prevent short-circuiting!
- Never disassemble or alter the battery contacts. Do not damage or puncture battery cells. Doing so would result in an explosion hazard!
- Keep the NiMH battery away from children.

Lithium Polymer (LiPo) Battery Warnings

- Never charge a lithium polymer battery with a charger designed for NiCd, NiMH, or any other type of battery chemistry. Use ONLY charger designed for LiPo battery.
- Do not leave LiPo battery unattended during charging.
- Do not overcharge the battery.
- Always place the battery on a heat resistant surface alone when charging.
- Always put the LiPo battery inside a charging protection coatner while charging.
- Do not allow LiPo cells to overheat at any time. Cells which reach greater than 140 Fahrenheit (60C) will usually become damaged and will catch fire.
- Do not charge LiPo cells on or near combustible materials including paper, plastic, carpets, vinyl, leather, and wood. inside an R/C modl or full size automobile.
- Do not discharge LiPo; doing so will damage the battery.
- Do not expose LiPo cell to water or moisture at any time.
- Do not store battery near open flame or heater.
- Do not assemble LiPo cells or pre-assembled packs together with other LiPo cells or packs.
- Always store LiPo battery in a secure location away from children.
- Always remove the LiPo battery if model is involved in any kind of crash. Carefully inspect the battery and connectors for even the smallest damage. CAUTION: cells may be hot!
- Do not allow the electrolyte to get into eyes or on skin. Wash affected areas immediately if they come into contact with electrolyte. Do not alter or modify connectors or wires of a LiPo battery pack.
- Always inspect the condition of the battery before charging and operating.
- Do not short circuit the LiPo battery.
- Do not have contact with a leaky/damaged battery directly.
- Do not charge battery out of recommended temperature range (0C - 45C).

5-1. XA8E-150 2.4GHZ Radio System

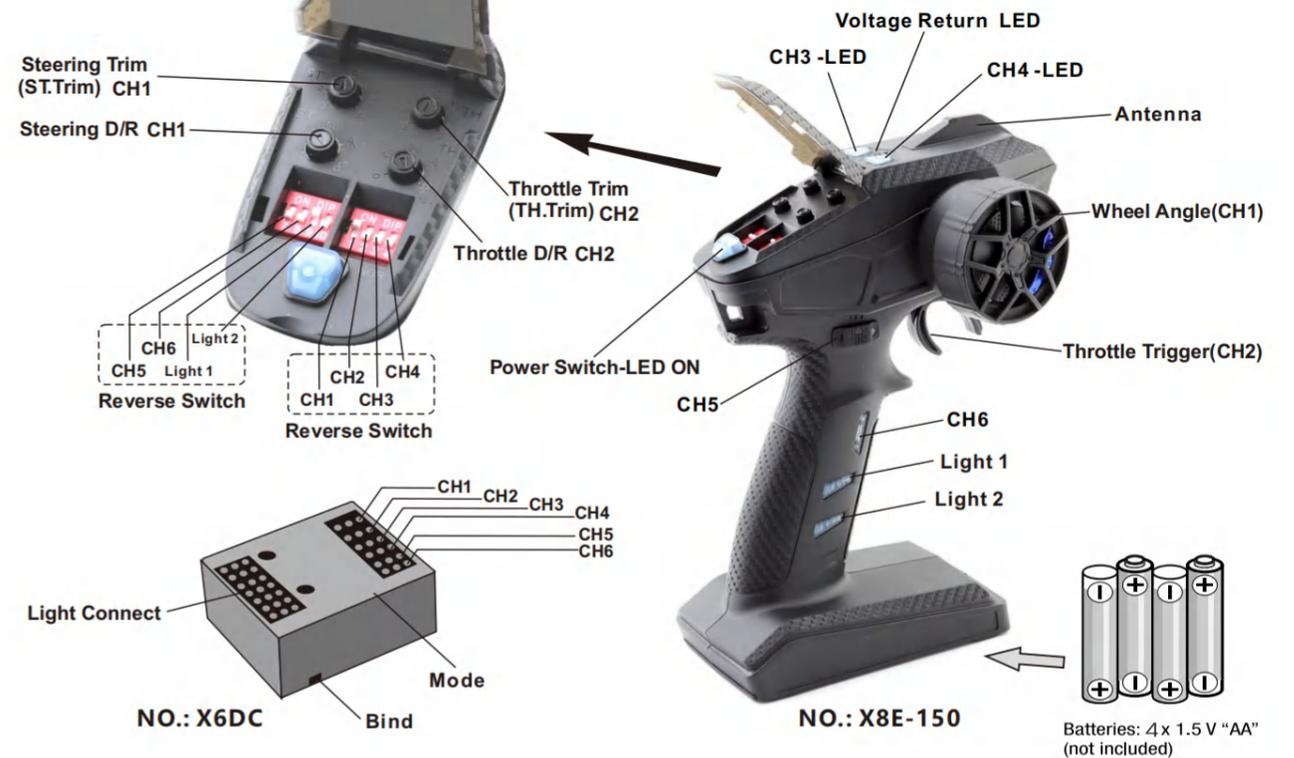


Install The Transmitter Batteries:

1. Open the battery compartment cover.
2. Insert 4 AA fully charged batteries or 2S Li-Po batteries in correct polarity. (No response if battery polarity reversed.)
3. Close battery compartment cover.


Binding Process:

1. Press receiver button, LED indicator fast flashing means entering into binding mode, the receiver will automatically looking for the nearest transmitter signal.
2. The indicator will always ON after successful bond.

5-2. Transmitter Steering Trim and Throttle Trim

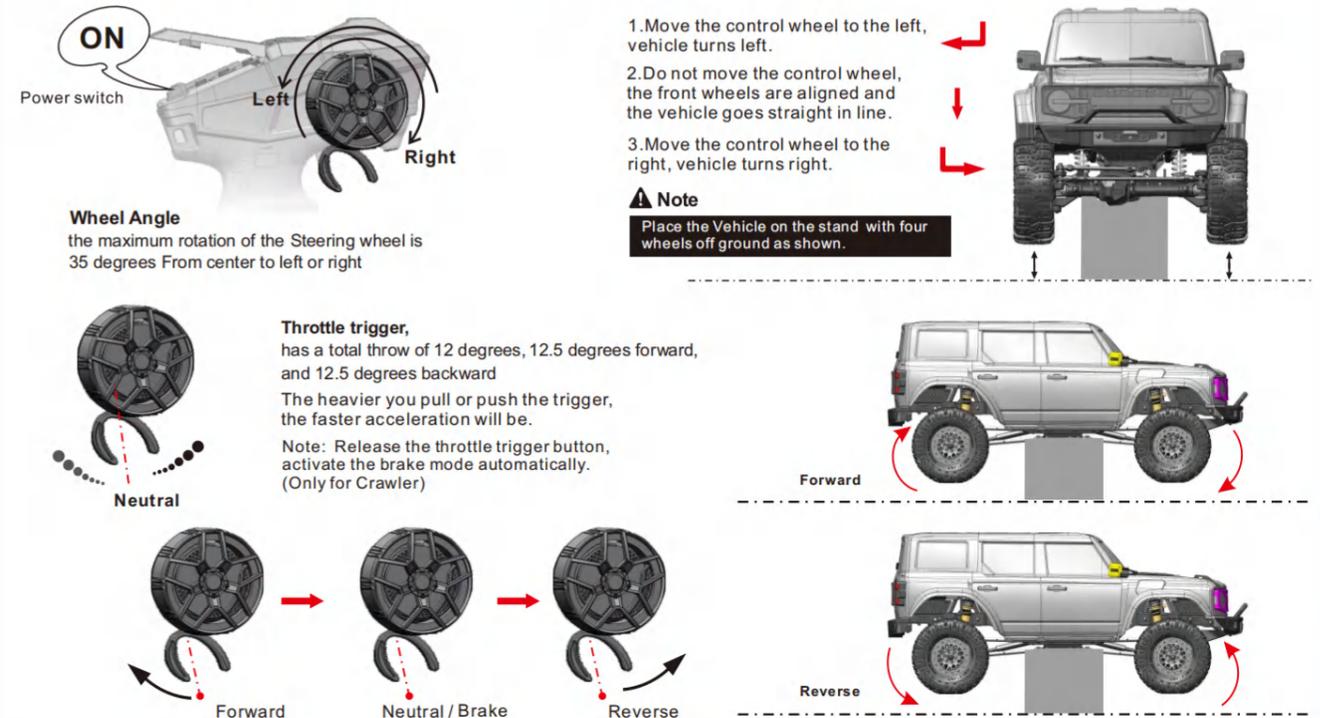

5-3. Transmitter Steering and Throttle Instruction

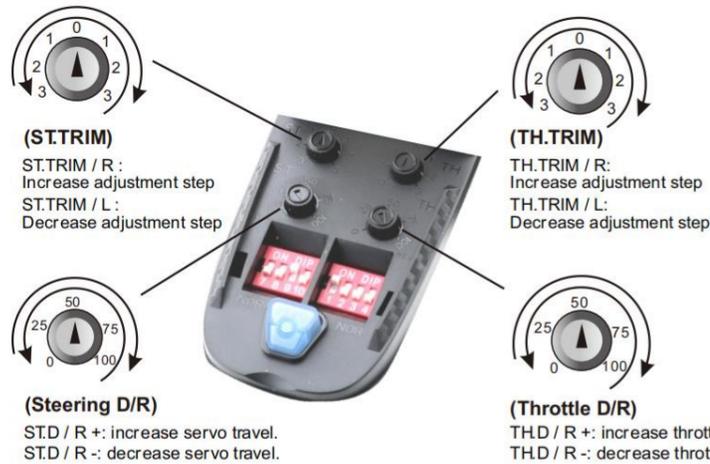


Note:

- Please trim the throttle (TH. Trim) until the vehicle does not move forward or backward automatically when first activated.
- ST.TRIM is the trims for CH1 (Steering), and use it to achieve the desired steering angle.
- ST.D/R is for servo travel adjustment and can be multiplexed as trims of CH1 (Steering).
- TH.D/R is for throttle travel adjustment and can be multiplexed as trims of CH2 (Throttle).

ST.REV

- Steering Trim(ST. Rev) is used to reverse the direction of servo movement.
- The ST.REV switches are the reverse buttons for CH1. When the switch is in the up position, it indicates reverse; when in the down position, it indicates normal.

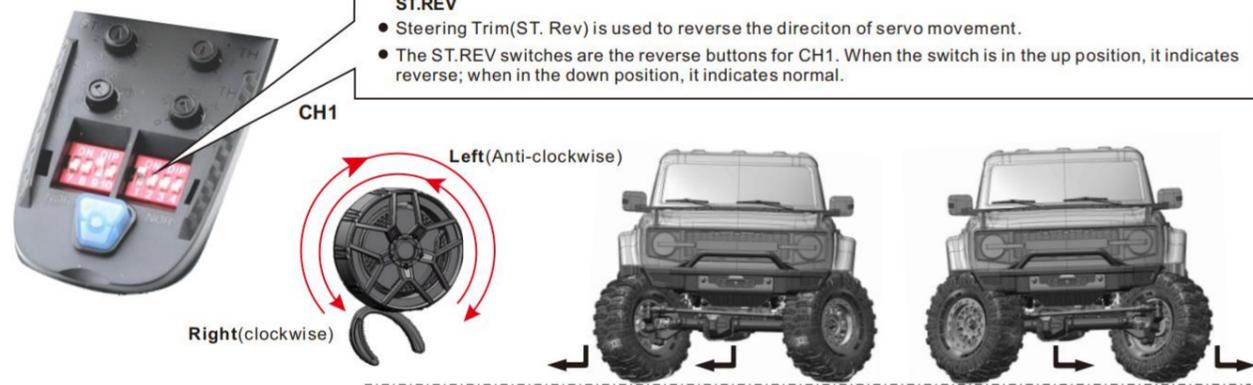


- Vehicle turning left when the control wheel is turned to the left (Steering Rev. At Normal position)
- Vehicle turning right when the control wheel is turned to the right (Steering Rev. at Reverse position)

Channel Reverse

TH.REV

- The Throttle Rev. is used to reverse the direction of motor rotation.
- The TH.REV switches are the reverse buttons for CH2. When the switch is in the up position, it indicates reverse; when in the down position, it indicates normal.

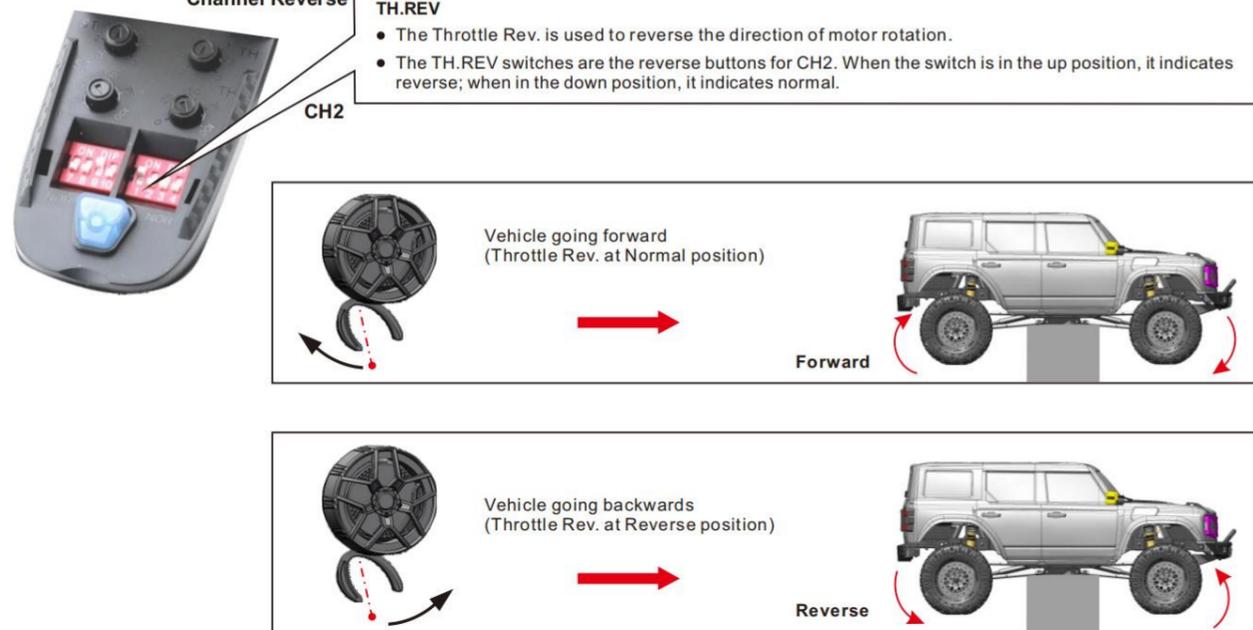

5-4 Servo Winch Hook Function




1. Press and hold CH4 button (LED is on), the winch turns in anticlockwise, the hook stretches, release the button, the stretch action stops.


Note: the hook requires external force to stretch.

2. Press and hold CH3 button (LED is on), the winch turns in clockwise, the hook contracts. Release the button, the contract action stops.


Warning: The hook contracts 15kg in maximum (flat surface), if surpass, the winch servo and wire will be damaged.

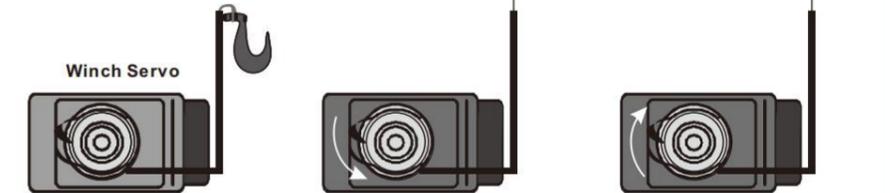

5-5 DIG Function instruction

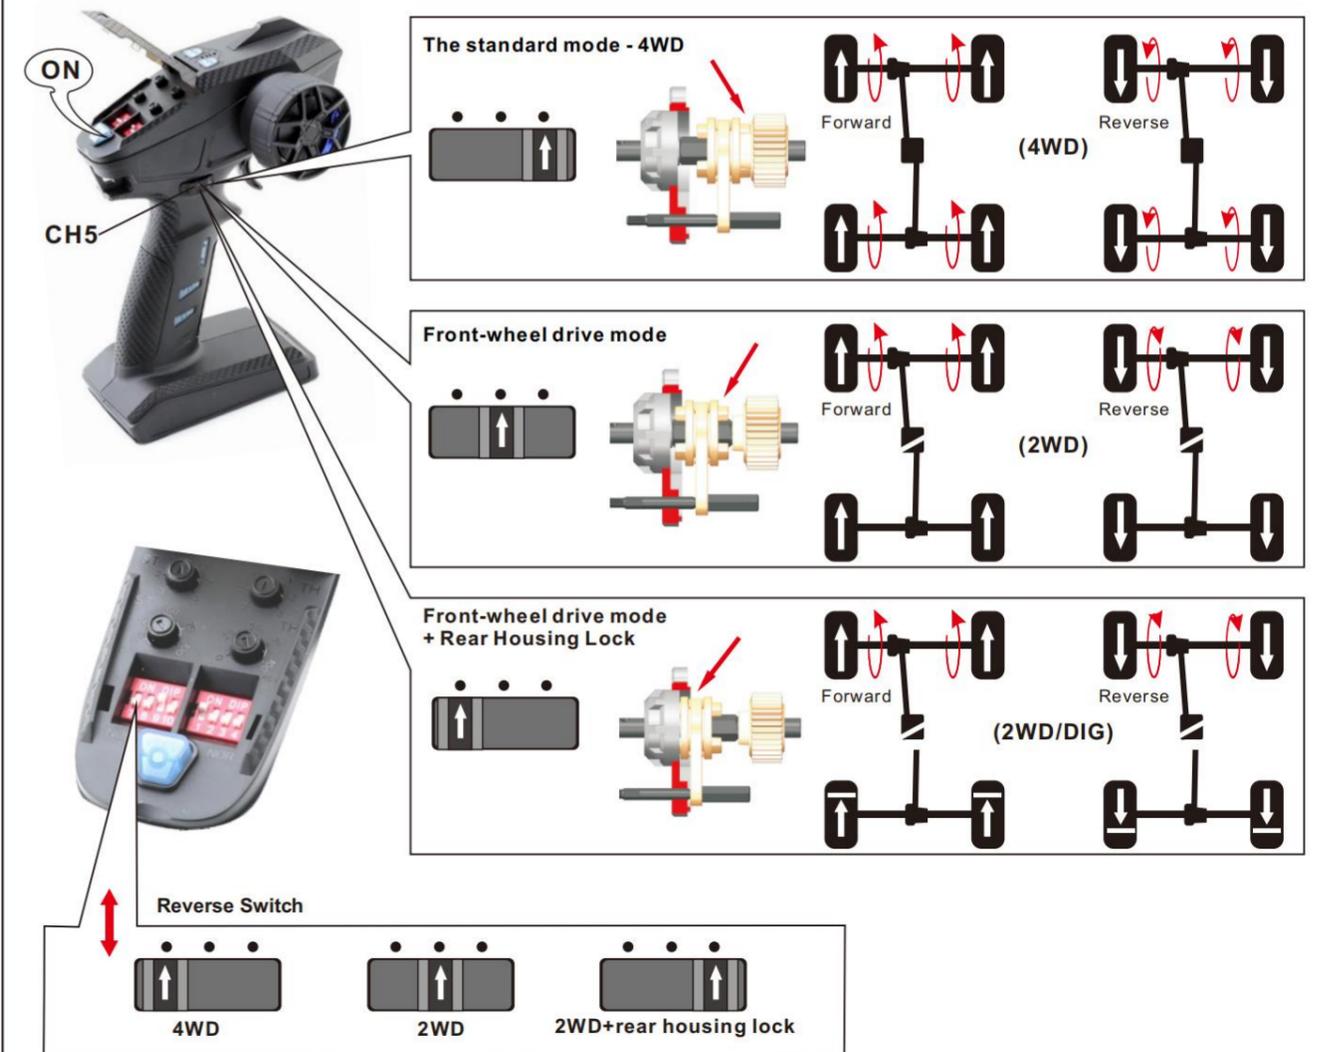


5-6. Shifting the High-Low Transmission

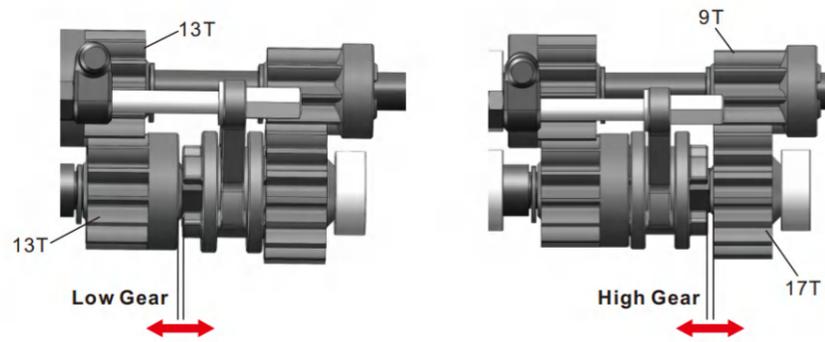

- Press CH6 button, the button light is on, switch to high-speed gear
- Press CH6 button again, the button light is off, switch to low-speed gear

! Please stop or slow down the vehicle when shifting gear, from low-speed to high-speed or from high-speed to low-speed, in order to make the shift operation more smoother and protect the gear.

5-7. Light Control Usage

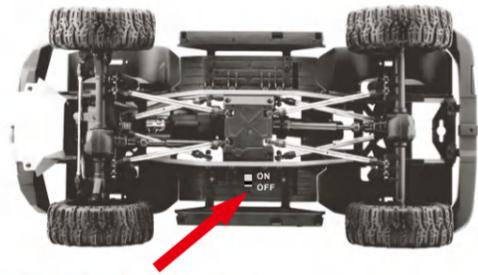

Power Switch(ON/OFF)


Mode I : Power on the swith, rear park lights are on, right and left cornering lights and back-up light are normal.



Model II : As shown in image(5-7A), press the button, the front headlights are on; press the button again, the front headlights are flashing; press the button once again, the front headlights are off.




Model III : As shown in image(5-7B), press the button, DRLs are on; press the button again, DRLs are flashing; press the button once again, DRLs are off.

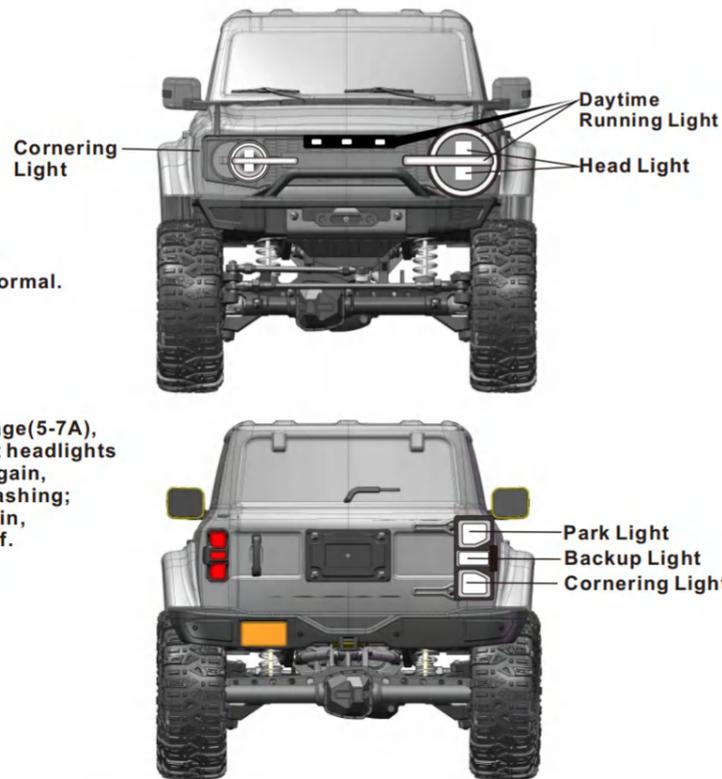

6. User Manual of Water-Proof Brushed Speed Controller

WP-1060-BRUSHED

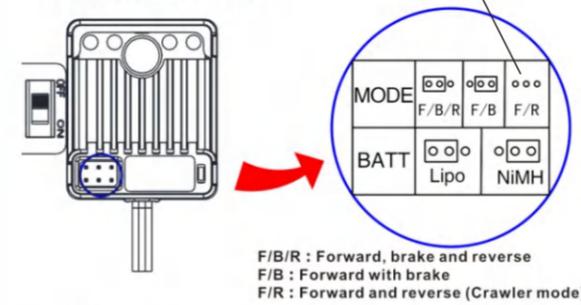

FEATURES

- *. Water-proof and dust-proof for all weather races.
- *. Small size with built-in capacitor module.
- *. Automatic throttle range calibration, easy to use.
- *. Multiple protections: Low voltage cut-off protection for Lipo or NiMH battery / Over-heat protection / Throttle signal loss protection.
- *. Easily programmed with the jumpers.

Model	WP-1060-BRUSHED
Cont. / Burst Current	Forward: 60A / 360A Backward: 30A / 180A
Input	2-3S Lipo, 5-9 Cells NiMH
Cars Applicable	1:10 on-road, off-road 1:10 Crawler, Tank & Boat
Motor Limit	2S Lipo or 5-6 cells NiMH 540 or 550 size motor ≥ 8T or RPM < 45000 @ 7.2V 3S Lipo or 7-9 cells NiMH 540 or 550 size motor ≥ 13T or RPM < 30000 @ 7.2V
Resistance	Fwd: 0.0008Ohm, Bwd : 0.0016Ohm
Built-in BEC	3A/6V (Switchmode BEC)
Dimension & Weight	36*30*18, 40g



Attention: The incorrect polarity will damage the ESC immediately. If the motor in the opposite direction, please swap these two wire connections.

[PROTECTION FUNCTIONS]

1. Low voltage Cut-off (LVC) protection: If the voltage of battery pack is lower than the threshold for 2 seconds, the ESC will enter the protection mode. When the car stops, the red LED blinks to indicate the low voltage cut-off protection has been activated.

Table A: LVC protection for WP-1060-BRUSHED, (F/B/R or F/B mode).

2S Lipo	3S Lipo	4S Lipo	5-9 cells NiMH
Output reduces 50% at 6.5V Output cuts off at 6.0V, cannot be recovered	Output reduces 50% at 9.75V Output cuts off at 9.0V, cannot be recovered	Output reduces 50% at 13V Output cuts off at 12V, cannot be recovered	Output reduces 50% at 4.5V Output cuts off at 4.0V, cannot be recovered


2. Over-heat protection: When the internal temperature of the ESC is higher than 100 Celsius degree or 212 Fahrenheit degree for 5 seconds, the ESC will reduce and cut off the output power.
3. When the car stops, the red LED blinks to indicate the over-heat protection has been activated. If the ESC cools down to 80 Celsius degree (176 Fahrenheit degree) the output power is recovered to normal state.

[TROUBLE SHOOTING]

Trouble	Possible Reason	Solution
After power on, motor cant work, no sound is emitted, and LED is off.	The ESC does not get its working voltage; Connections between battery pack and ESC are broken.	Check the battery wires connection or replace the defective connectors.
	Switch is damaged.	Replace the switch.
After power on, motor cant work; red LED blinks.	Throttle signal is abnormal.	Check the throttle wire connection; make sure it is plugged into the throttle channel of the receiver.
	Automatic throttle range calibration is failed.	Set the TRIM of throttle channel to 0 or turn the knob to its neutral position.
The car runs backward while giving throttle. (The motor runs in the opposite direction)	The wire connections between ESC and the motor need to be changed.	Swap two wire connections between the ESC and the motor.
The car cant go backward.	The jumper position is wrong.	Check the jumper and plug it to the correct position.
	The neutral point of throttle channel is changed or drifted.	Set the TRIM of throttle channel to 0 or turn the knob to its neutral position.
The car cant go forward, but can go backward.	The direction of throttle channel is not correct.	Reset the direction of throttle channel from original NOR to REV or from original REV to NOR.

Please review the ESC manual for more details.

7. Challenger Specifications

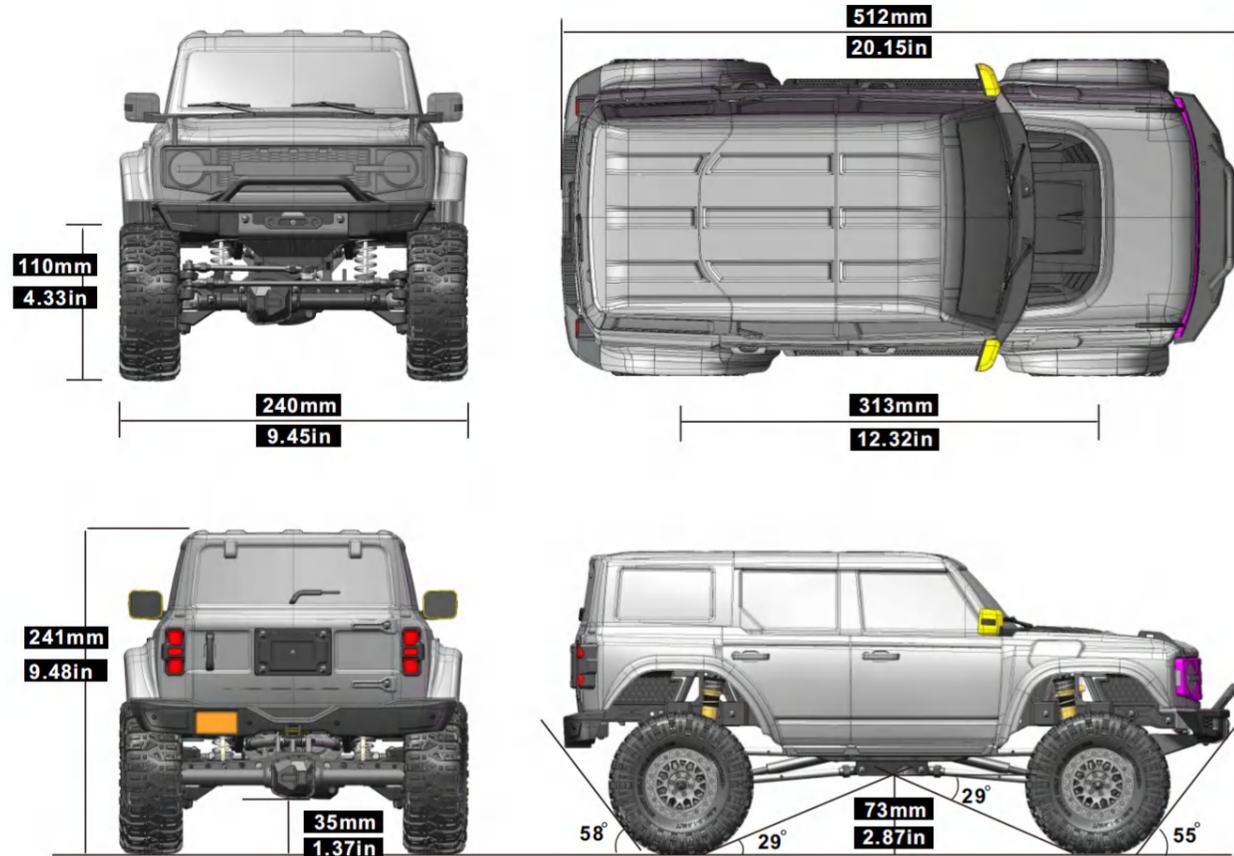

Item No	Ex86130	Wheel	110*40mm	Gear Ratio/Low	53:1(F), 57:1(R)
Item Name	PRO RUNNER	Clearance	73mm (chassis) 35mm (steel)	Gear Ratio/High	28:1(F), 30:1(R)
Scale	1/10	Weight	3.03kg(No battery)	Steering Servo	25KG
Description	Crawler/Off-Road	Radio/Rx	2.4G/6CH(X8E-150)	Winch Servo	360 / 25KG
Drive Mode	Front-Wheel Drive +4WD	R/C Distance	<120m>100m	Function Servo	4.8~7.4V/9G
Length	512mm	Battery Recommendations	2S or 3S Lipo, 5-9 Cells NIMH Battery	Body Type	PC Soft
Width	240mm	Battery Size	<142*48*55mm(L*W*H)	Body Color	Green / Red / Blue
Height	241mm	Motor	RC550/6235	Gift Box Size	575*275*282(H)mm
Wheel Base	313mm	ESC	WP-1060 / 60A	Piece per Carton	1P

8. All the ways done, your car is ready to run. Hope you enjoy the fun in driving it.

Tip: Always turn off the receiver and then the transmitter when not in use. Clean the car before storage.


Vehicle Maintenance:

- Please remove the batteries from both the vehicle and the transmitter, when the car is out of use for a long time,
- Before each use, please carefully check whether the circuit wires of the model are tight and free of loose connectors. Also, please carefully inspect if the wheels are securely fastened—loose wheels can cause excessive wear to parts such as the drive shaft, wheel cups, or wheel hubs.
- Ensure the unused battery pack should be charged to 50-60% capacity before being stored in a dry and cool place, out of the reach of children.
- After each use, please carefully check if all parts are intact, and repair or replace the worn parts. Use a fine brush to sweep the sand, marl and other dirt inside the model, then wipe it cleanly by a soft cloth.


9. Troubleshooting

Problem	Possible Cause	Solution
Car does not respond during operation	Electronic plugs loose or fall off	Switch off and reconnect
	Vehicle battery not charged, activating the ESC low voltage cut-off to protect the battery	Replace/recharge the vehicle battery
	Motor or ESC dirty or damaged	replace new Motor (recommend to purchase factory Motor)
	ESC failed	replace new ESC (recommend to purchase factory ESC)
	ESC power off by overheated Motor	Stop operation and cool the ESC or Motor
	Motor overheated, demagnetized or damaged	replace new Motor (recommend to purchase factory Motor)
	Transmitter batteries low or beyond the remote control distance	Replace the transmitter batteries, adjust the remote control distance
No Backward, forward normally	Transmitter damaged	Relace or contact seller
	ESC "operation mode" setting error	Relace or contact seller
	ESC damaged	Refer to manual "ESC", set "operation mode" into "forward and backward reverse with brake"
Car operate automatically, with no control	Throttle damaged or transmitter throttle not centered	Refer to manual "Transmitter", and reset
	Throttle trim out of center on transmitter	Refer to manual "Transmitter", and reset
Normal operation, speed shift failure	Neutral throttle is in incorrect position	Adjust ESC in neutral point
	Error Operation	Ensure to operate in stop status, more refer to the Manual
Sluggish Action	Gear Cable damage or loose	Replace the accessory or Readjust
	Servo wire inserts in wrong Receiver slot	Refer to the manual, Readjust
	Battery damaged / not charged	Check, change or recharge
Light Function Failure after Battery properly installed	Throttle trim out of center on transmitter	Adjust (refer to manual "transmitter")
	Motor dirty/ damaged	Clean/ replace
	Drivetrain dirty / damaged	Check and clean
Lack of steering and throttle	Light Plug is not connected or in wrong position	Check the plug connection
	Transmitter Set Error or Light Control Panel Damage	Reset the Transmitter. Otherwise, please check the light control panel is damaged or not.
Vehicle moves left / right without steering input	Light Cable in wrong installation and connection	Readjust the installation and Connection
	ESC power off by overheat	Stop operation, cool the ESC
	Transmitter too near interfere electrical objects	Check and rebind transmitter and receiver, refer to manual
Controls Reversed	Steering accessories damaged	Check and replace
	Wheel loose	Check and replace
	Drivetrain dirty / damaged	Check and replace
Clicking noise in operation	ST. REV or TH. REV	Change switch position, refer to manual
	Check the wires between ESC and Motor correct or not	Switch the motor black and red wire
	Check the bodyshell damaged or fall off	Retrim or replace
Only steering, no forward and backward	Loose or tight between motor gear and main gear	Reset gear mesh
	Gear damaged or rocked	Remove gear cover and inspect. If necessary, replace gear
ESC failed or abnormal	ESC failed or abnormal	Reset the neutral point or replace
	Transmitter failed or abnormal	Relace or contact seller


Transmission Assembly-1

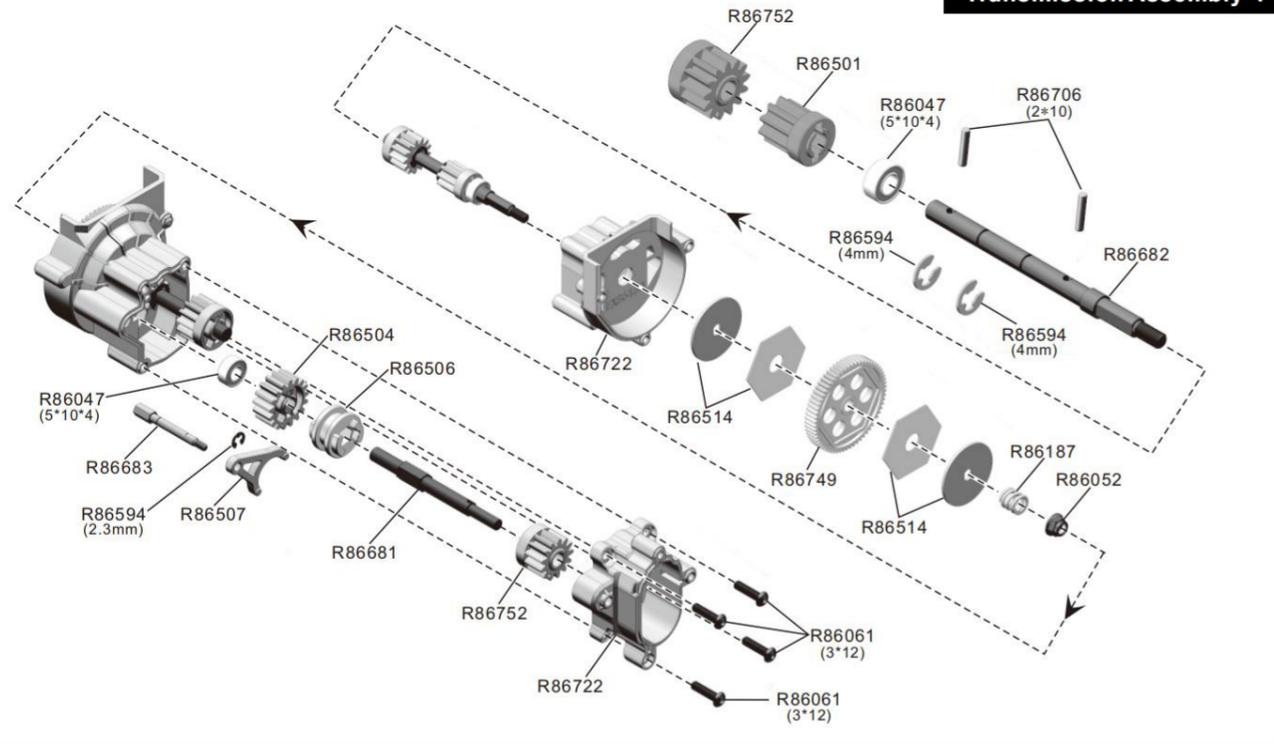


Transmission Assembly-2

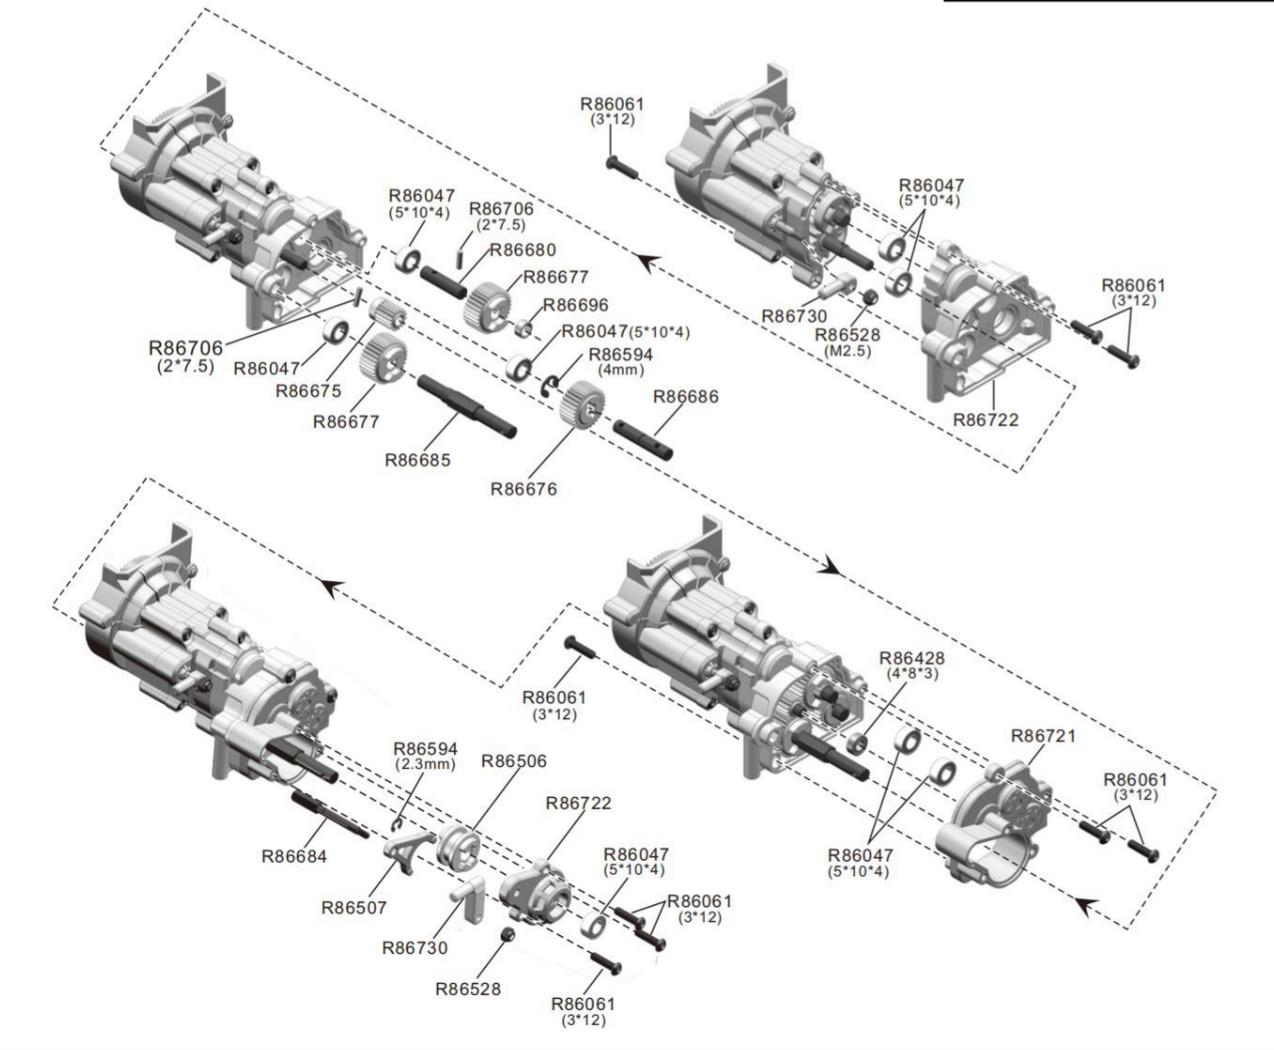


Motor/Transmission Assembly

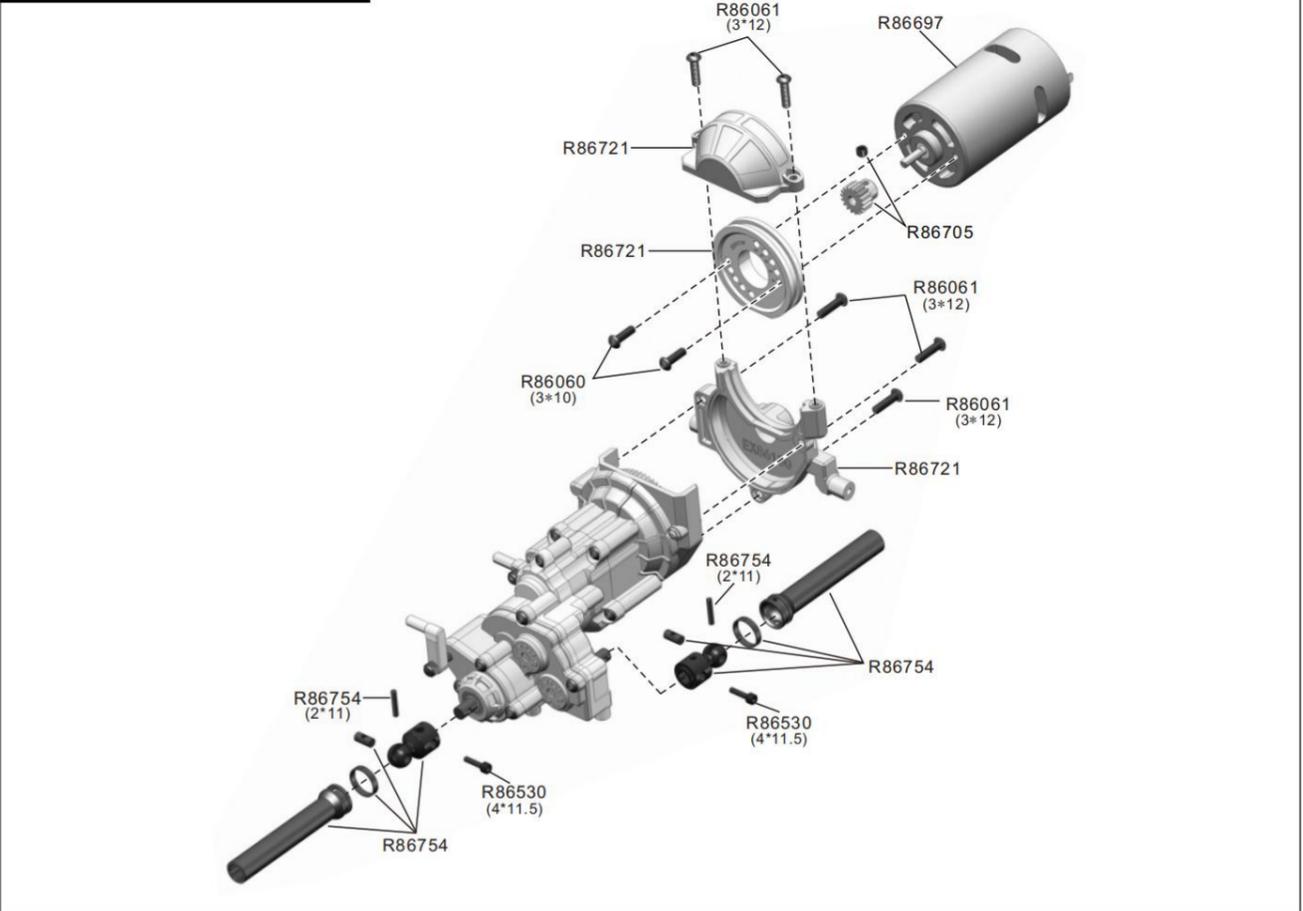


Front Axle Assembly

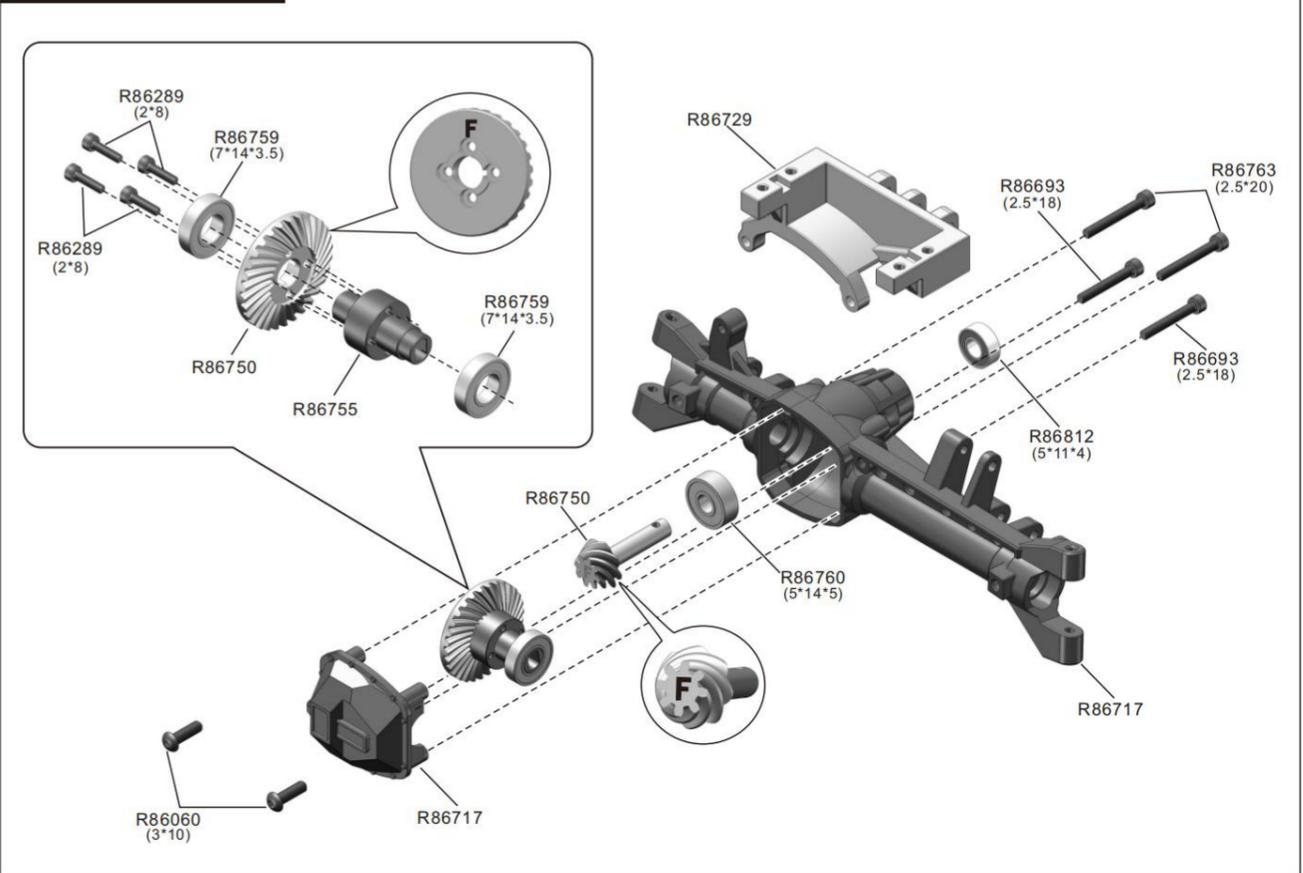


Steering Mount(Right)

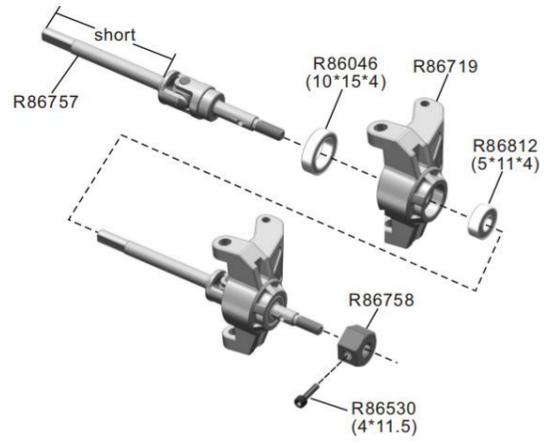


Steering Mount(Left)

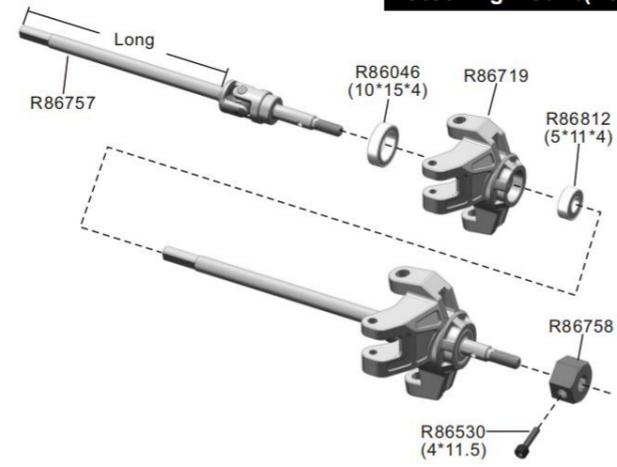


Front Drive Axle Assembly

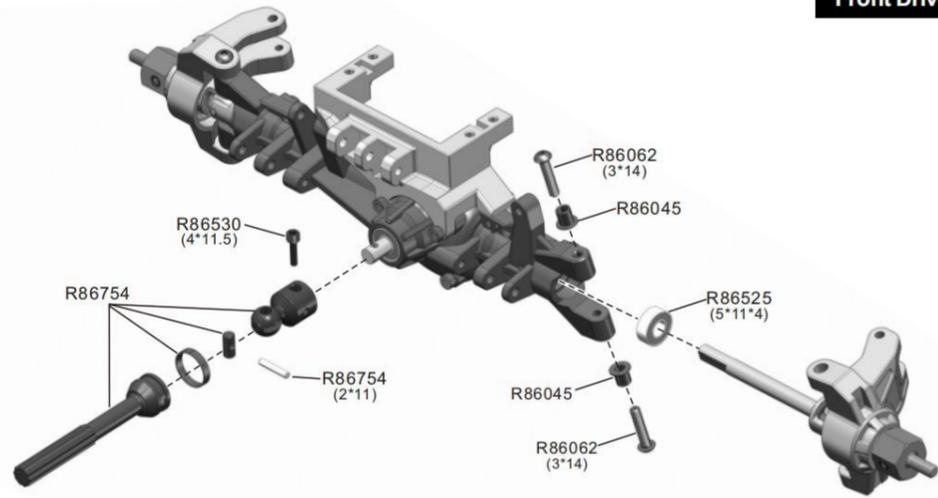



Rear Axle Assembly

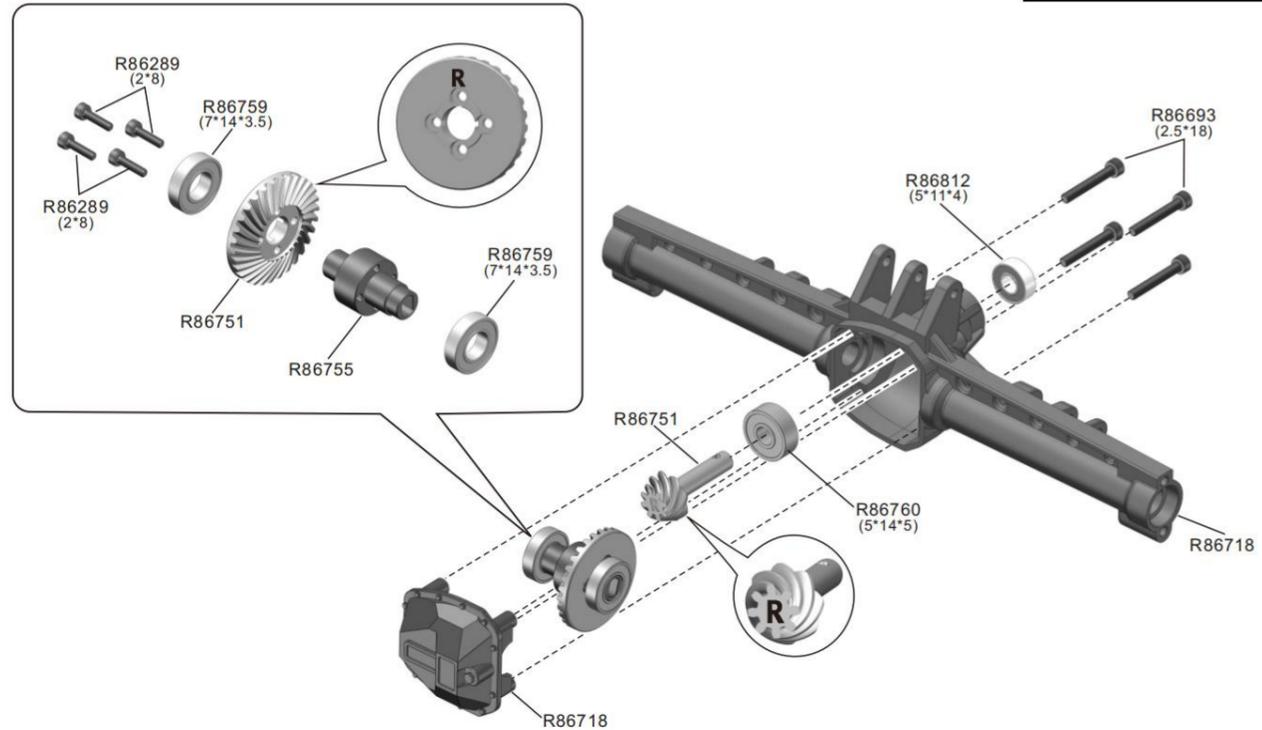

Rear Drive Axle Assembly

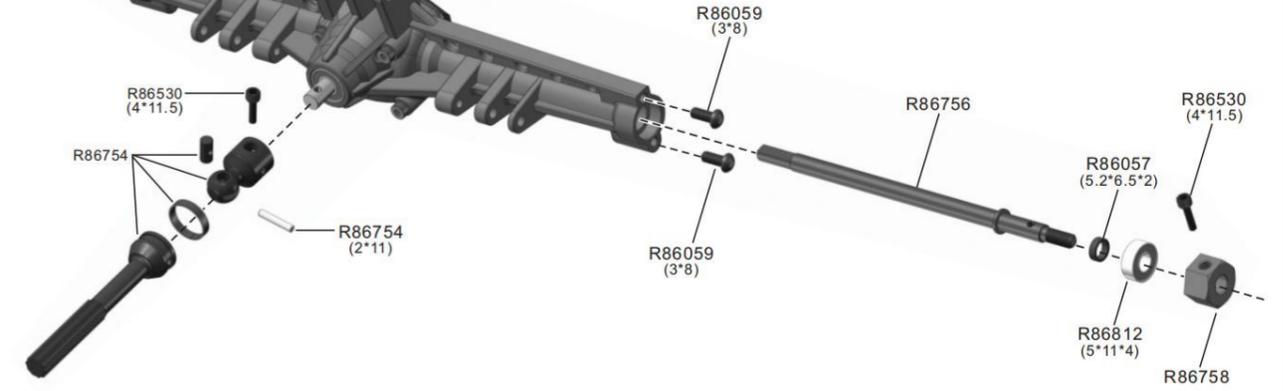


Steering Servo Assembly

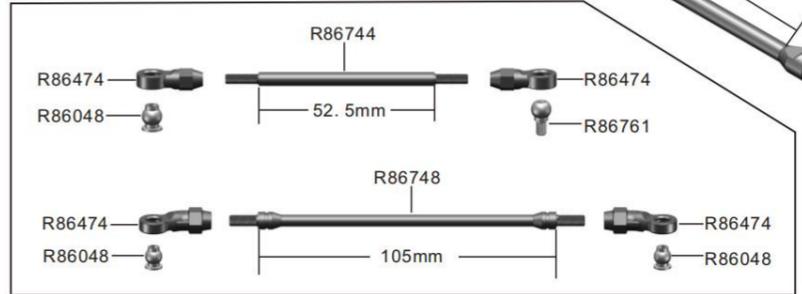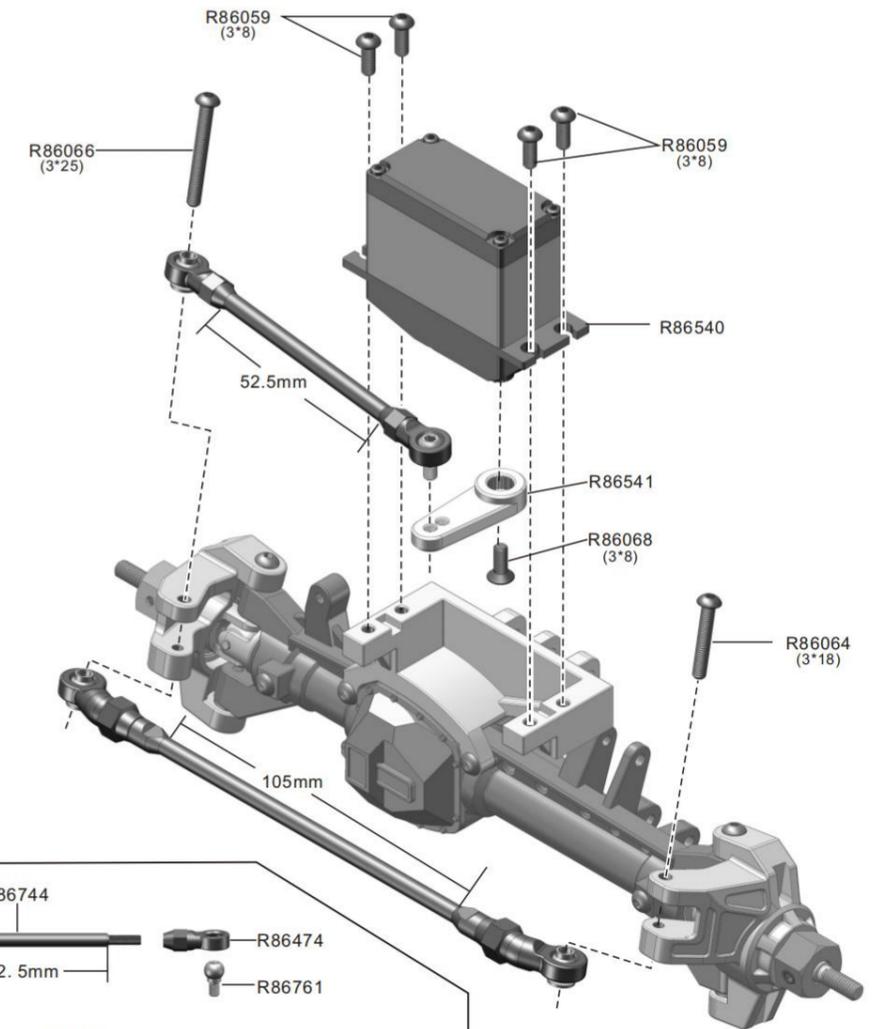


Shock Absorber Assembly




Front Suspension Linkage Installation

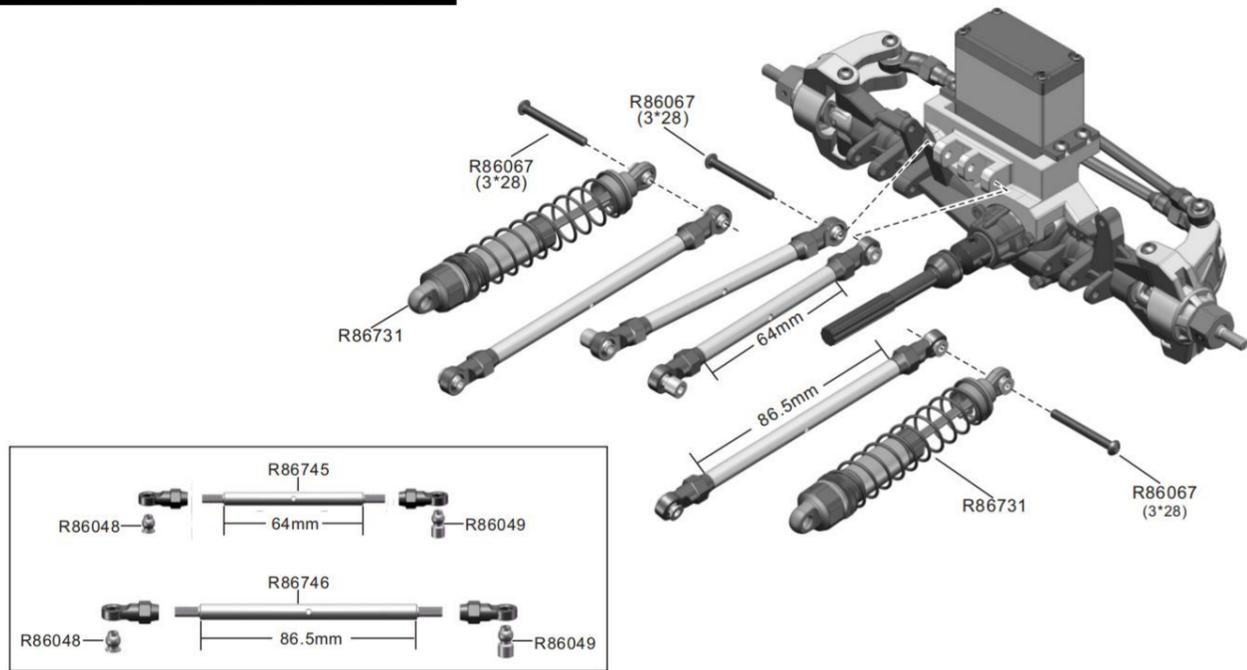


Rear Suspension Linkage Installation

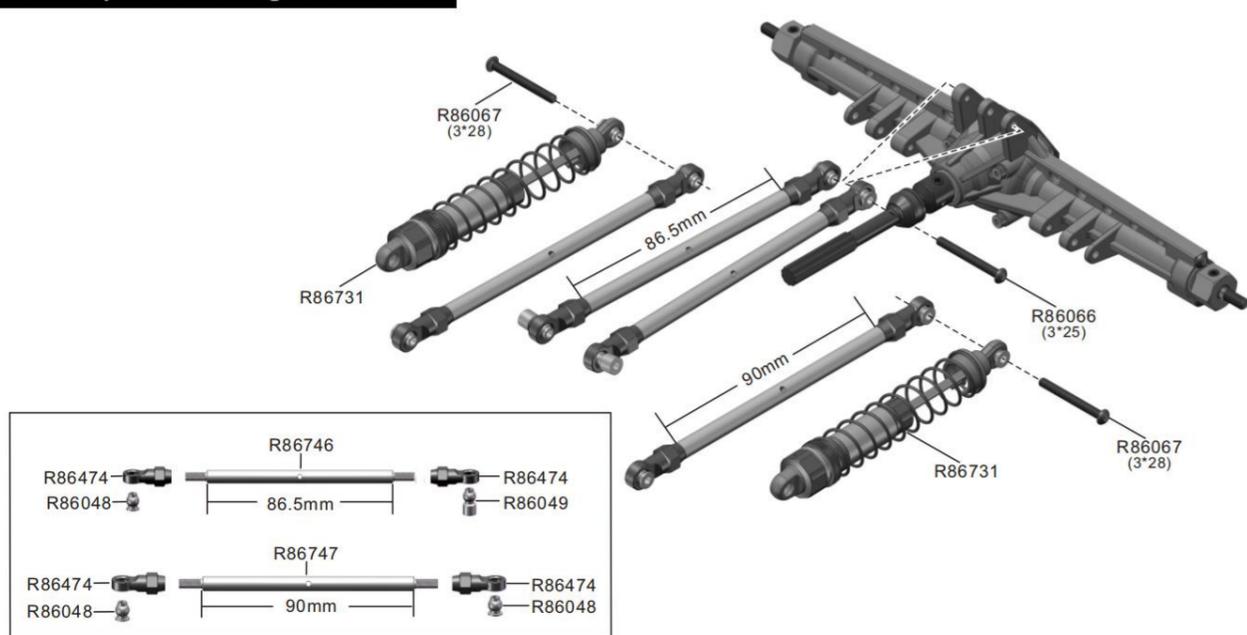


Main Body (Center Right)

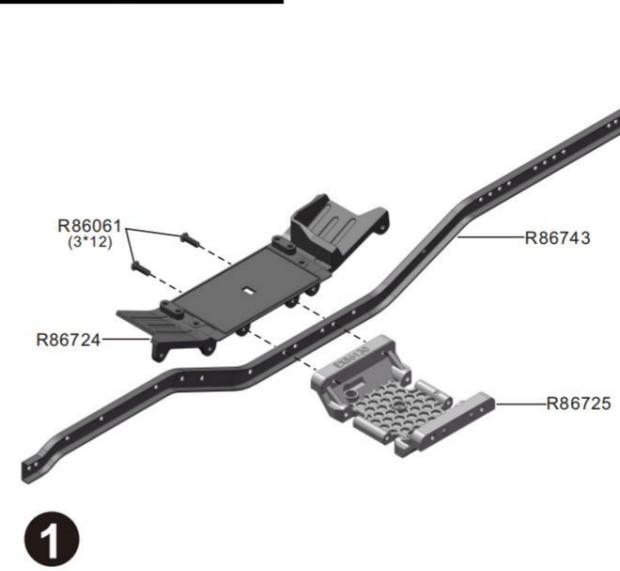


Main Body (Center Left)

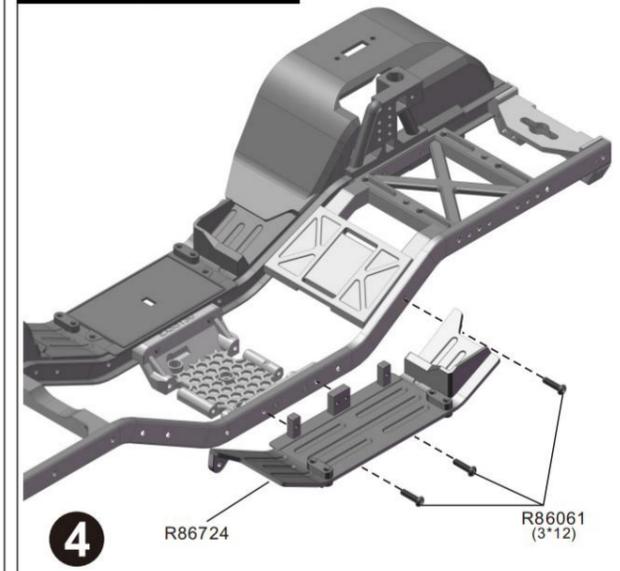


Main Body (Front Right)

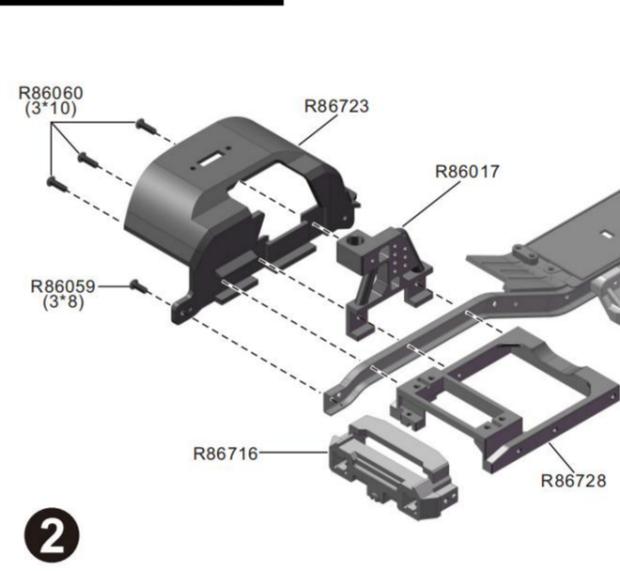


Main Body (Front Left)

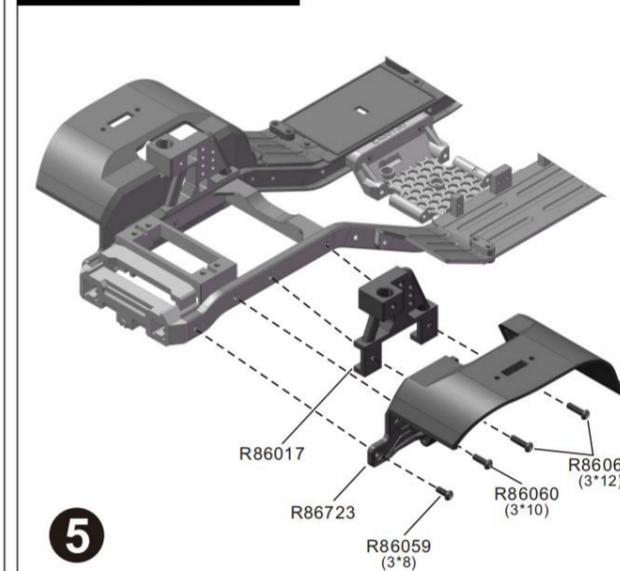


Main Body (Rear Right)

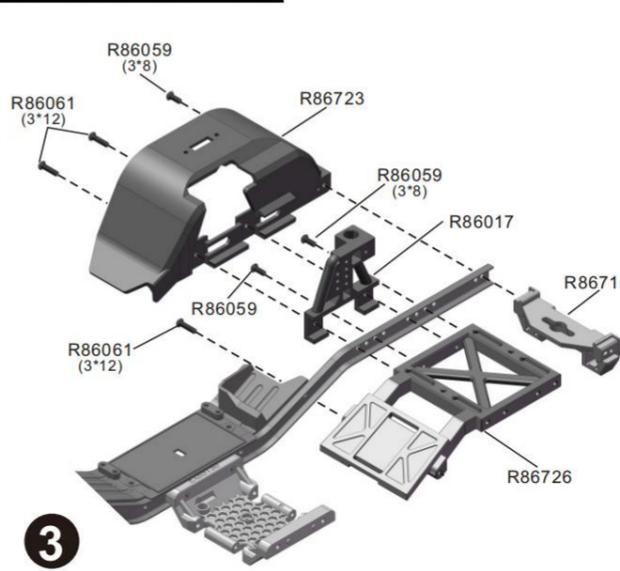


Main Body (Rear Left)

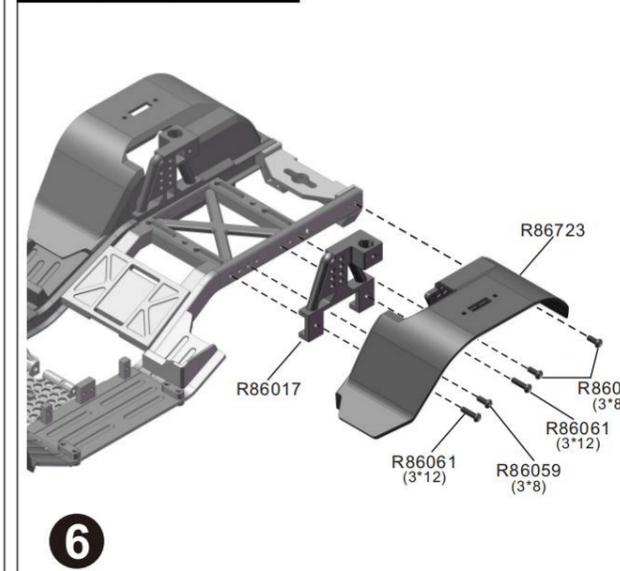


Mounting Center Gear Box

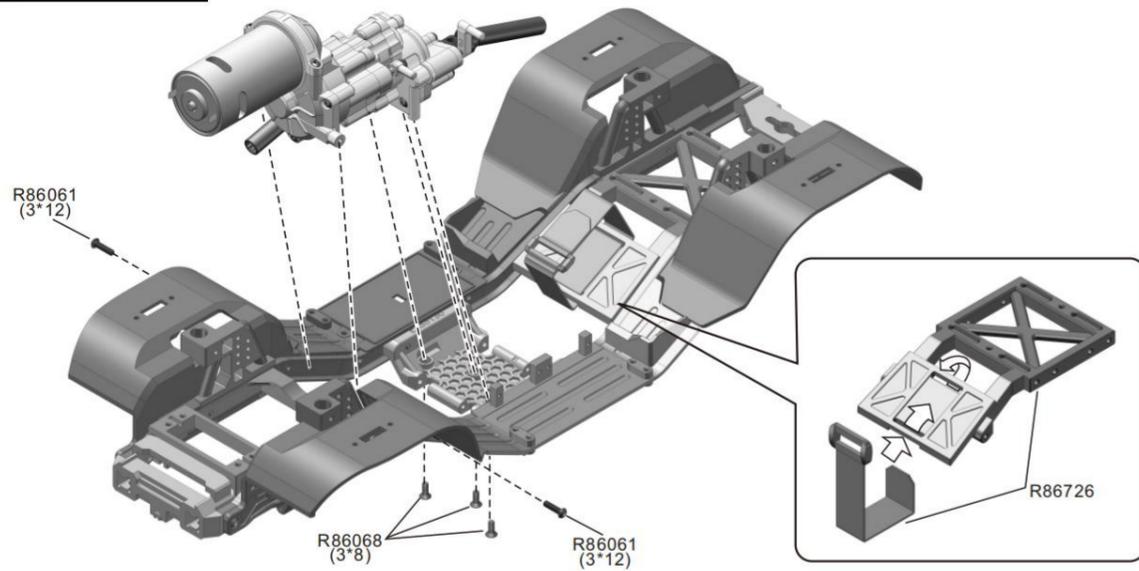


Suspension Connected Plate

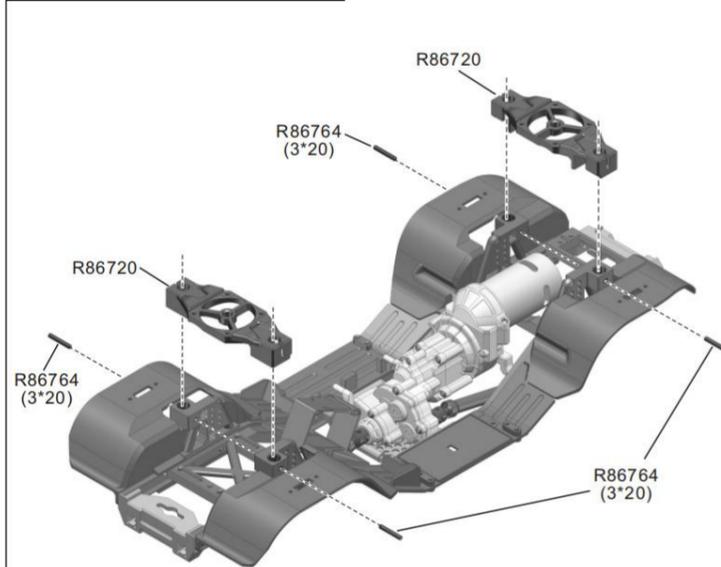


Winch Servo Assembly

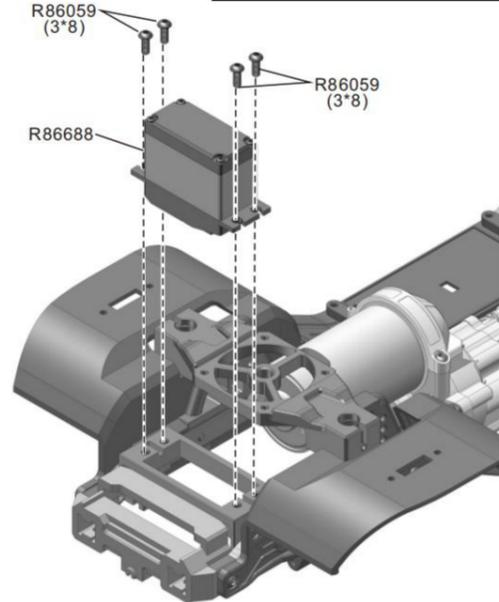


Installing Front Bumper

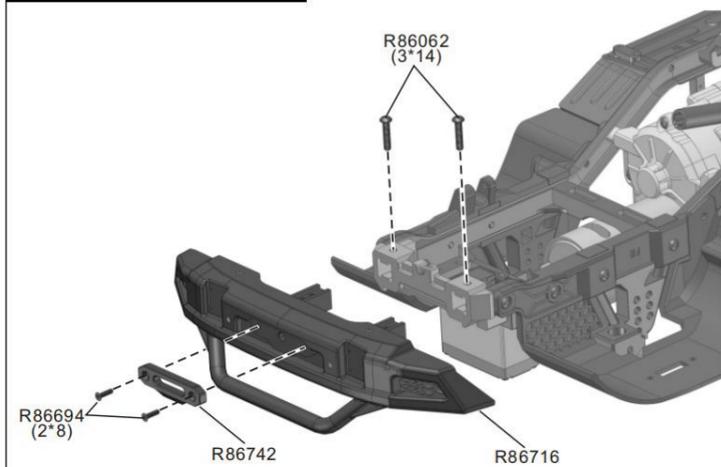


Installing Rear Shock Absorber

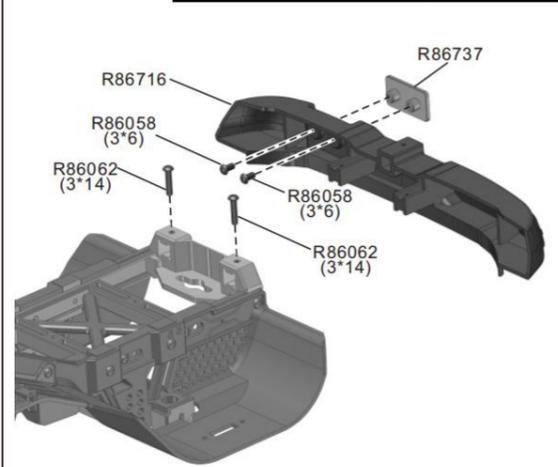


Winch Assembly

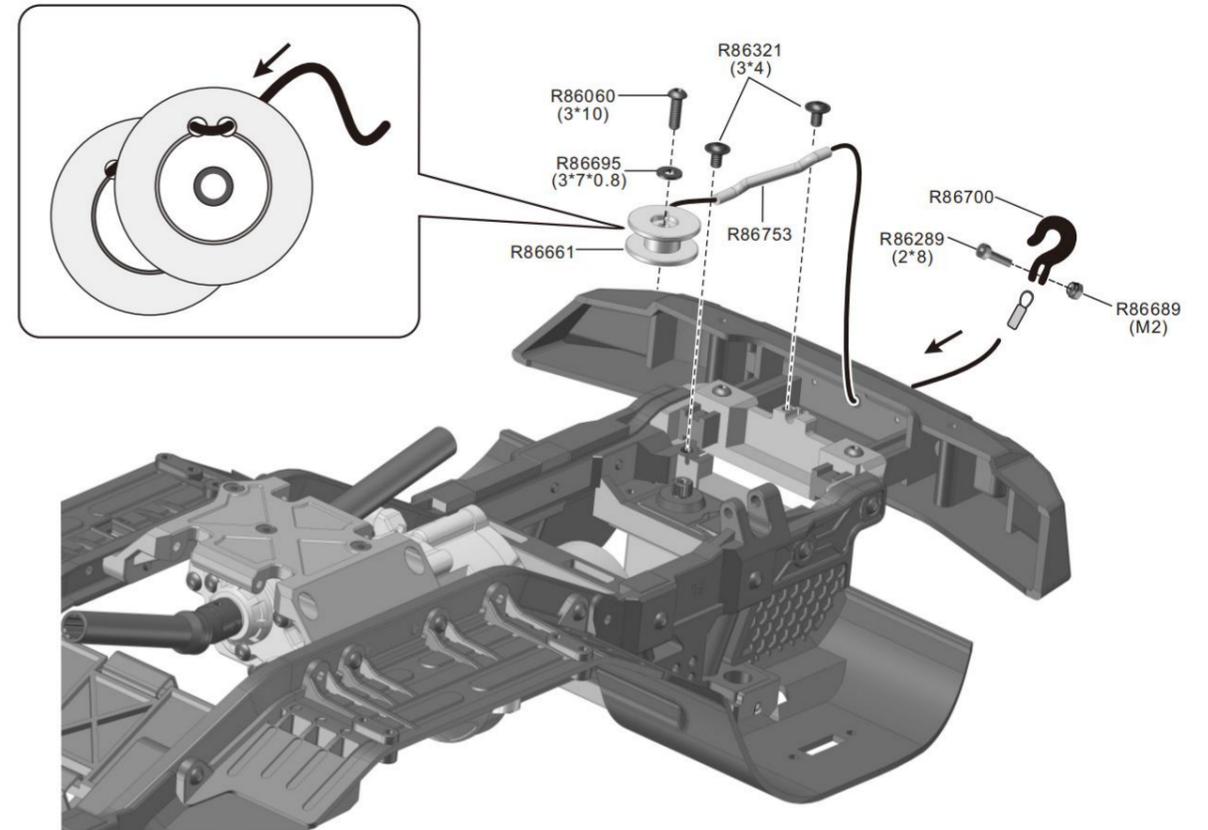


Installing Front Axle Complete

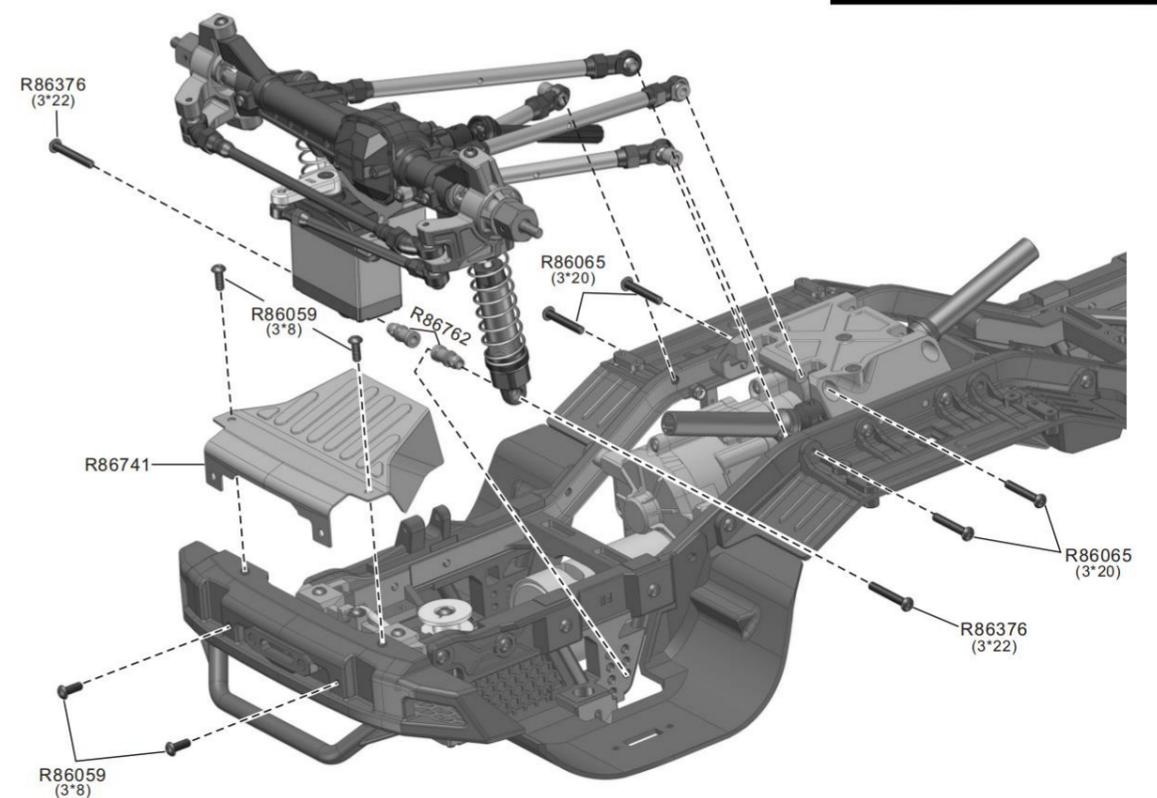


Installing Rear Axle Complete

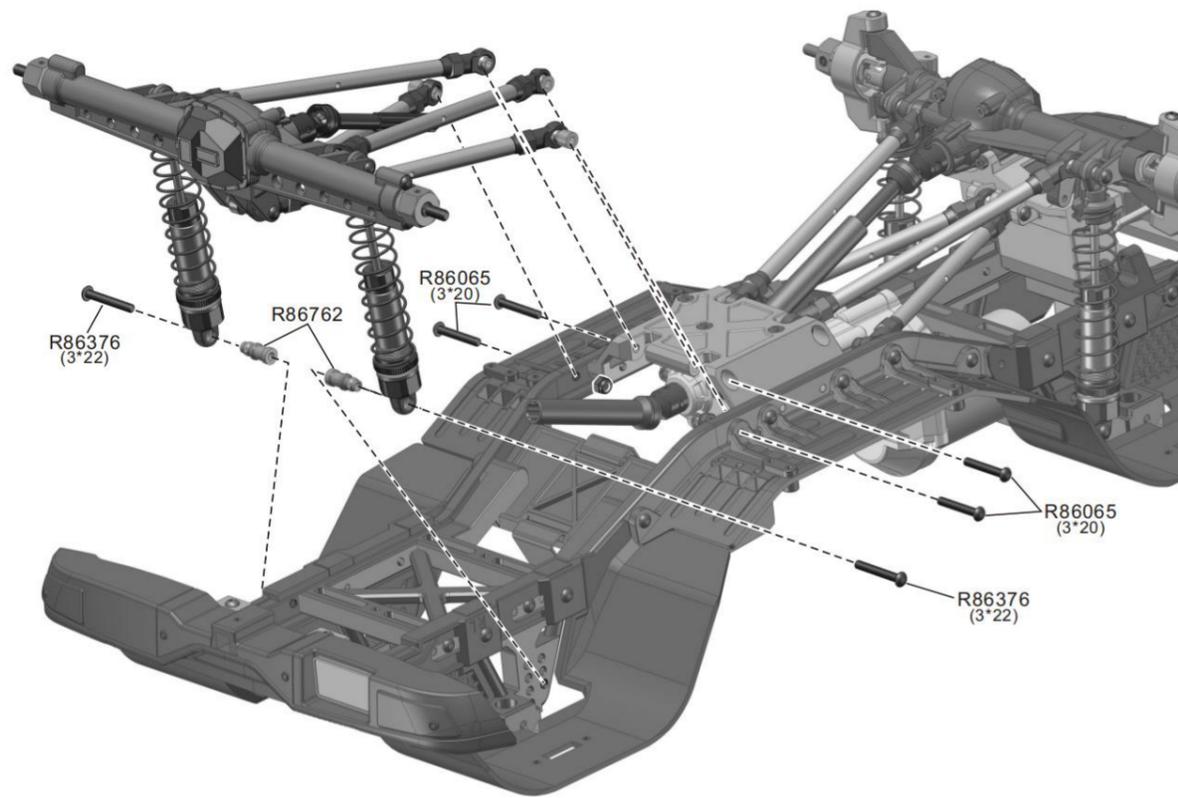


Installing Side Plate(Left/Right)

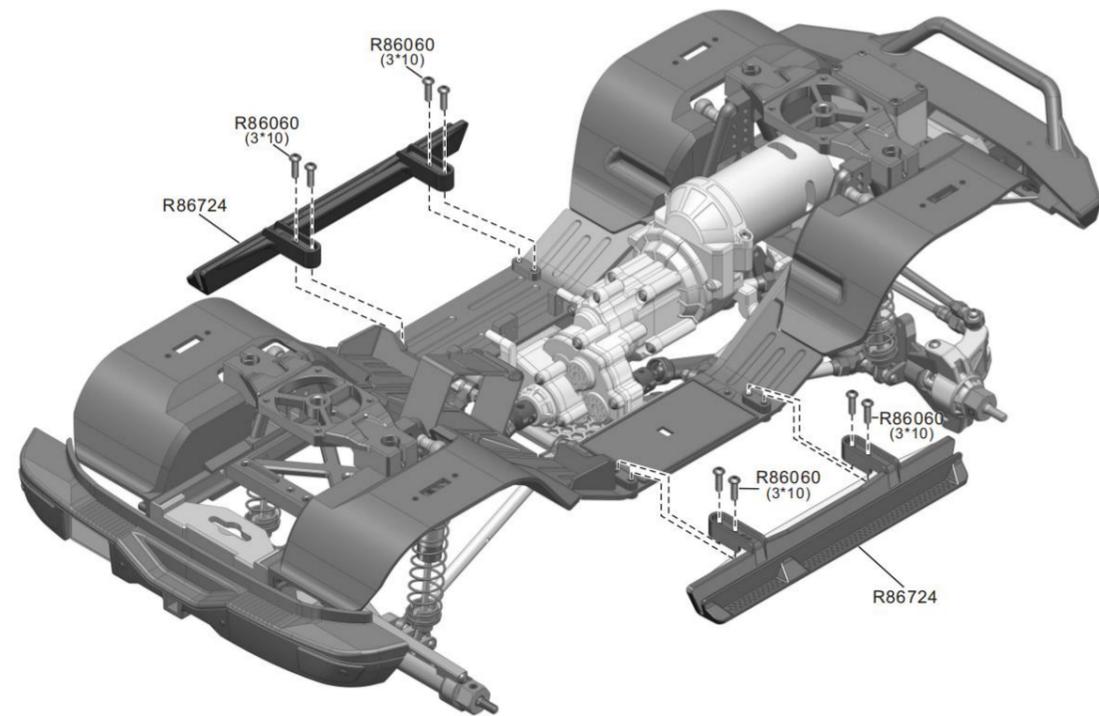


Dig Servo Assembly

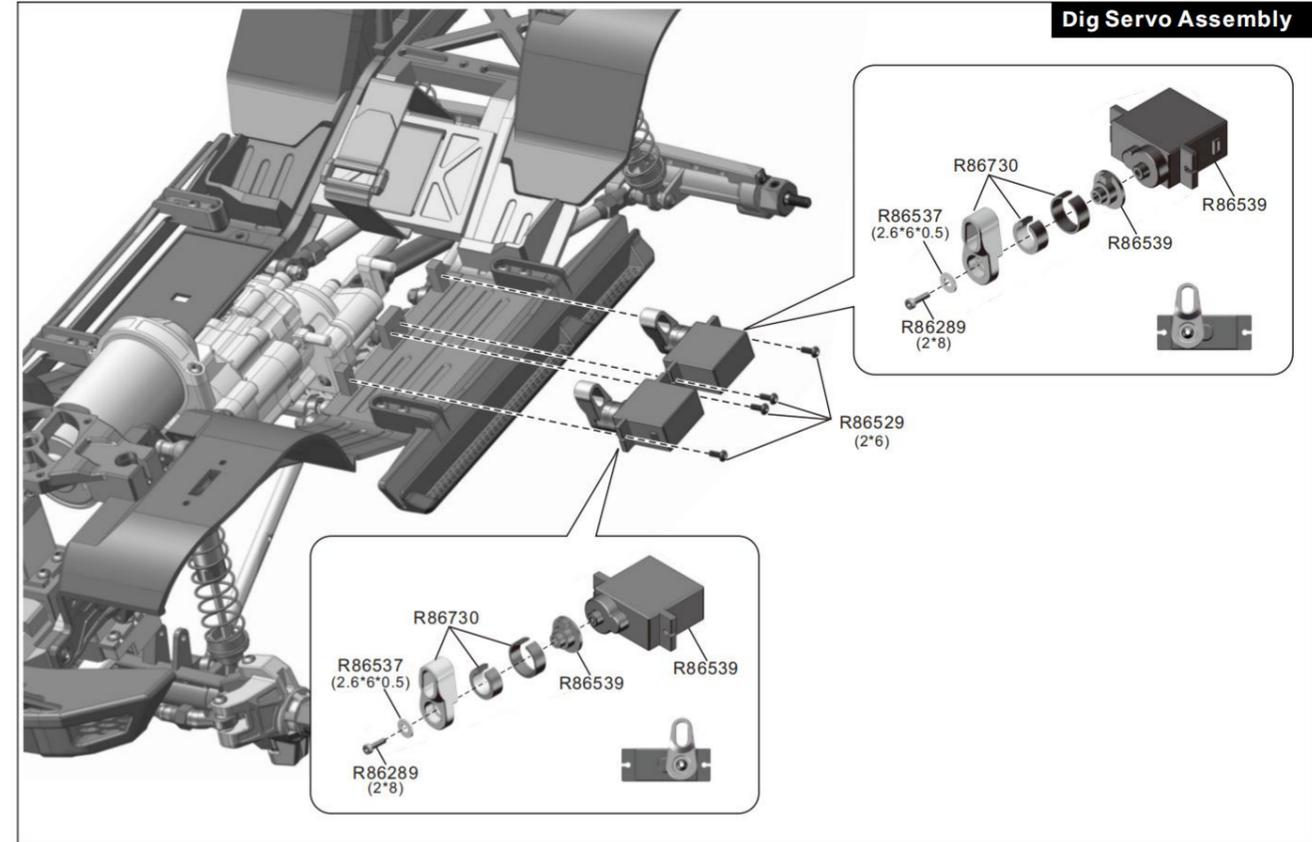


Installing Receiver/ Wheel Complet To Vehicle

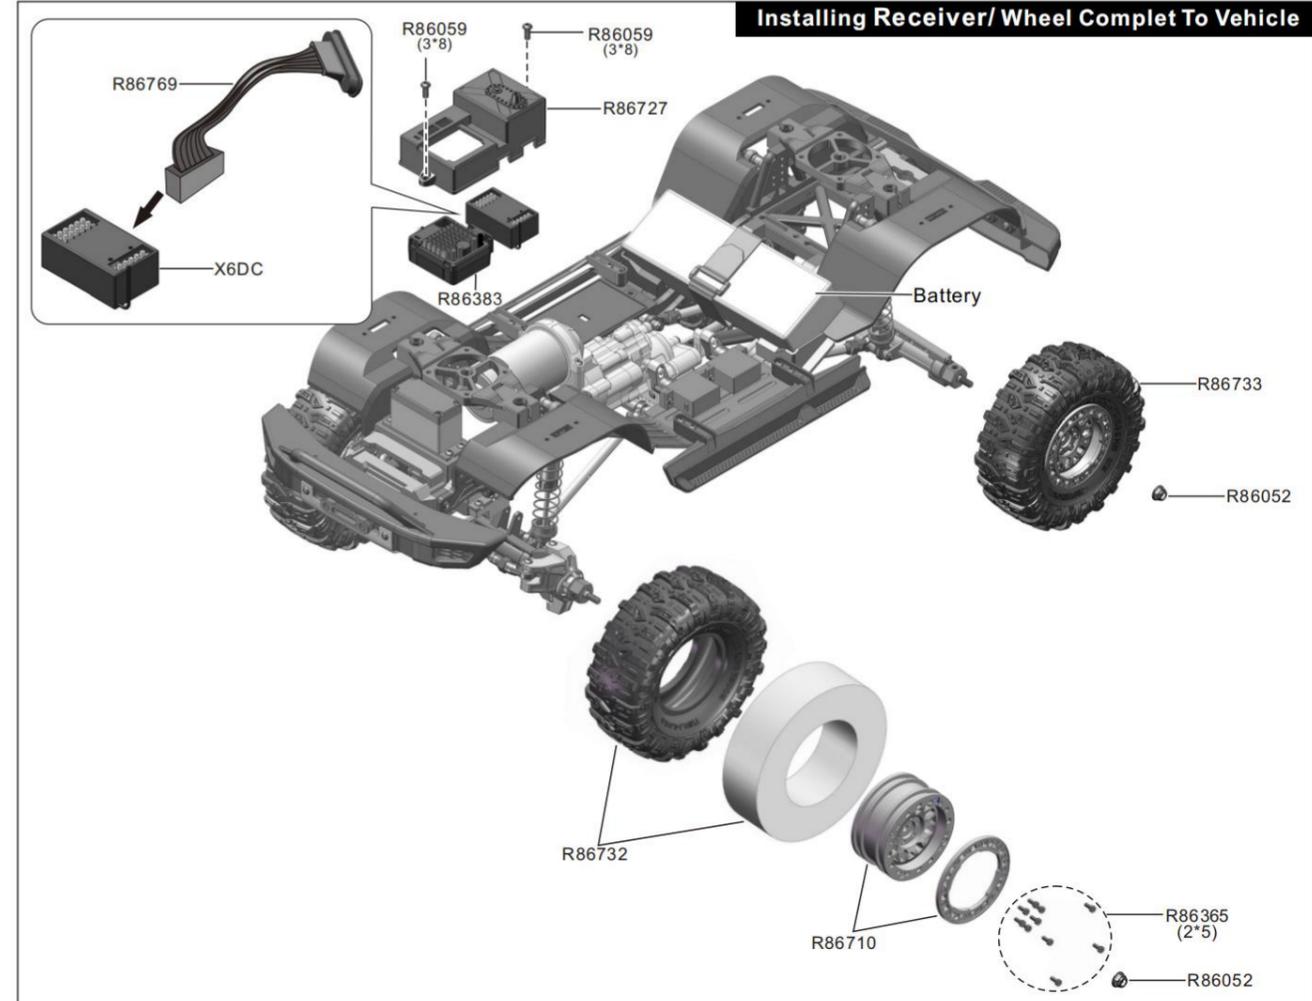


Body Assembly-1

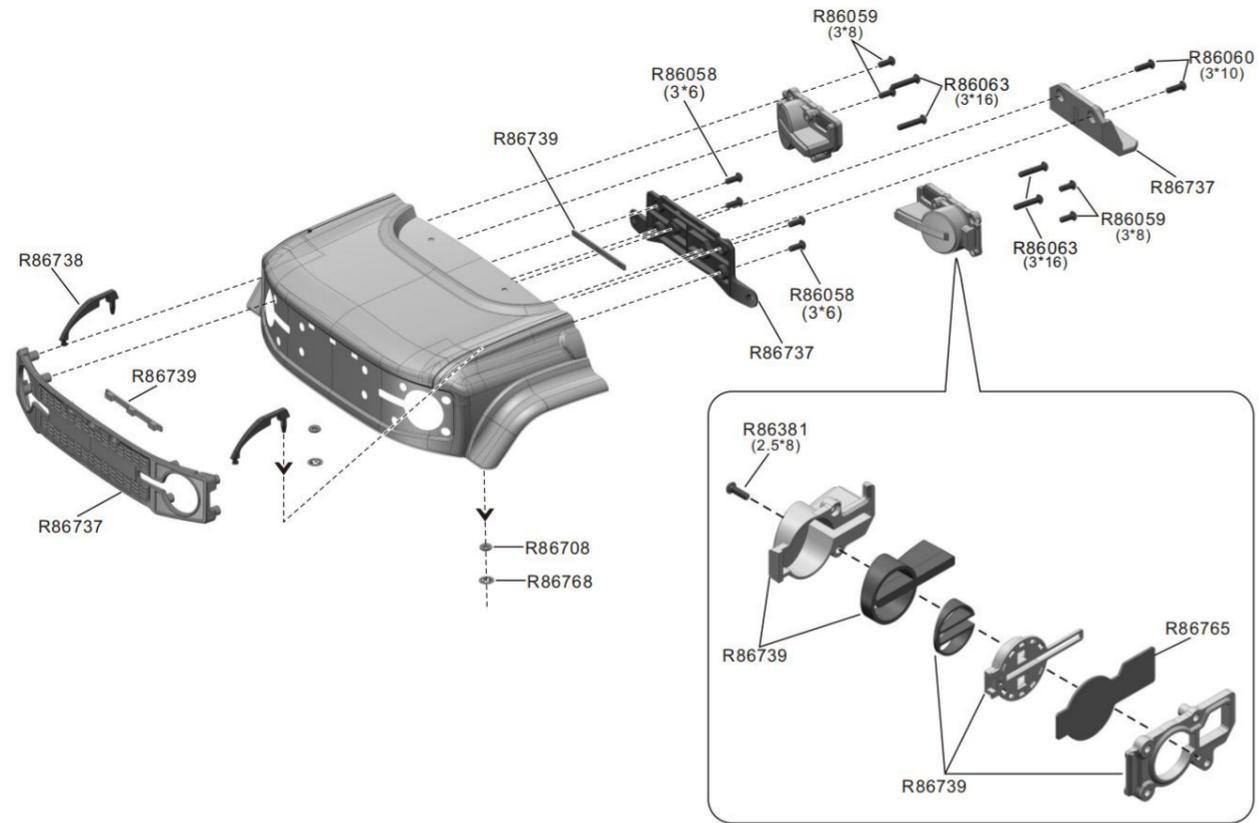


Body Assembly-2

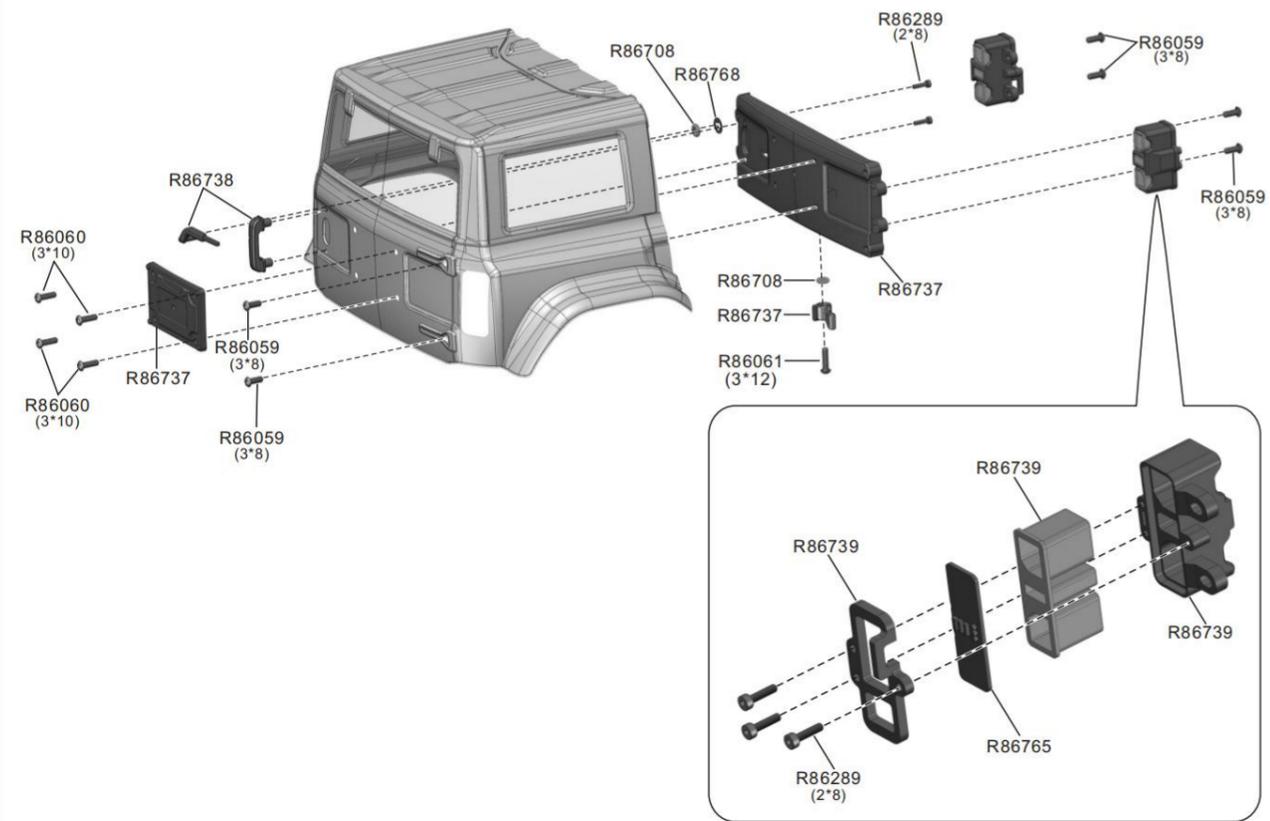


Body Assembly-3

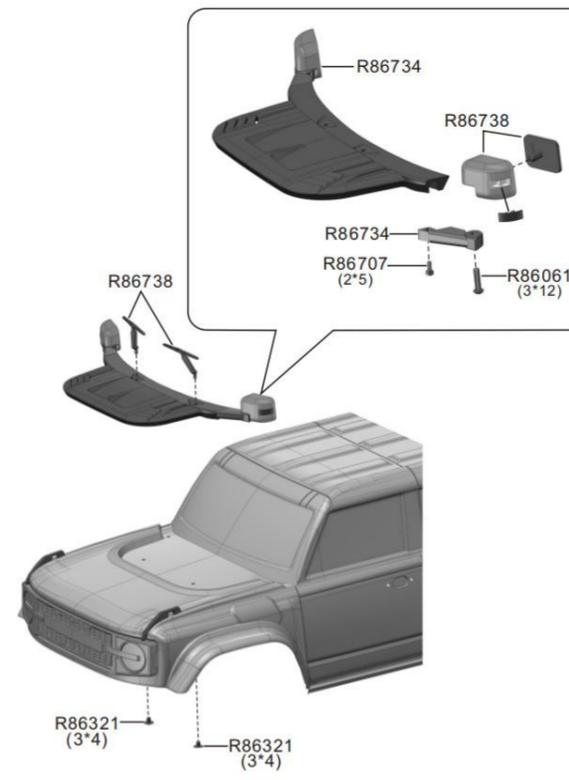


Body Assembly-4

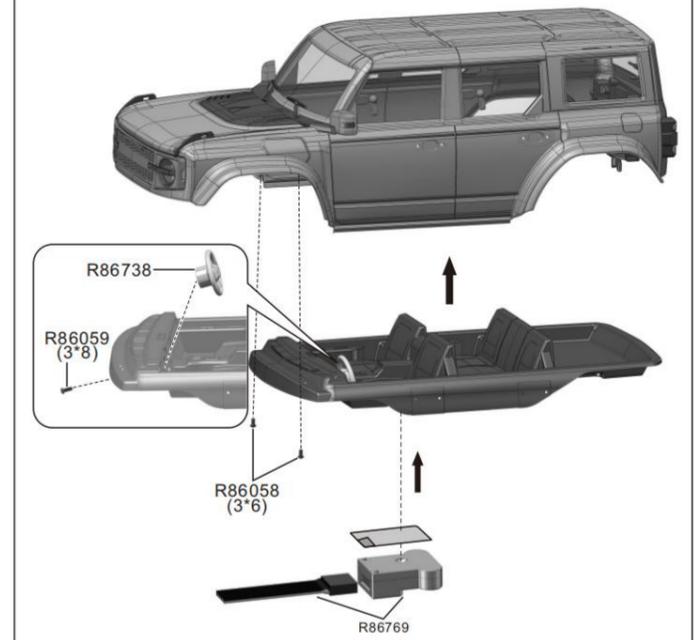

Body Assembly-5

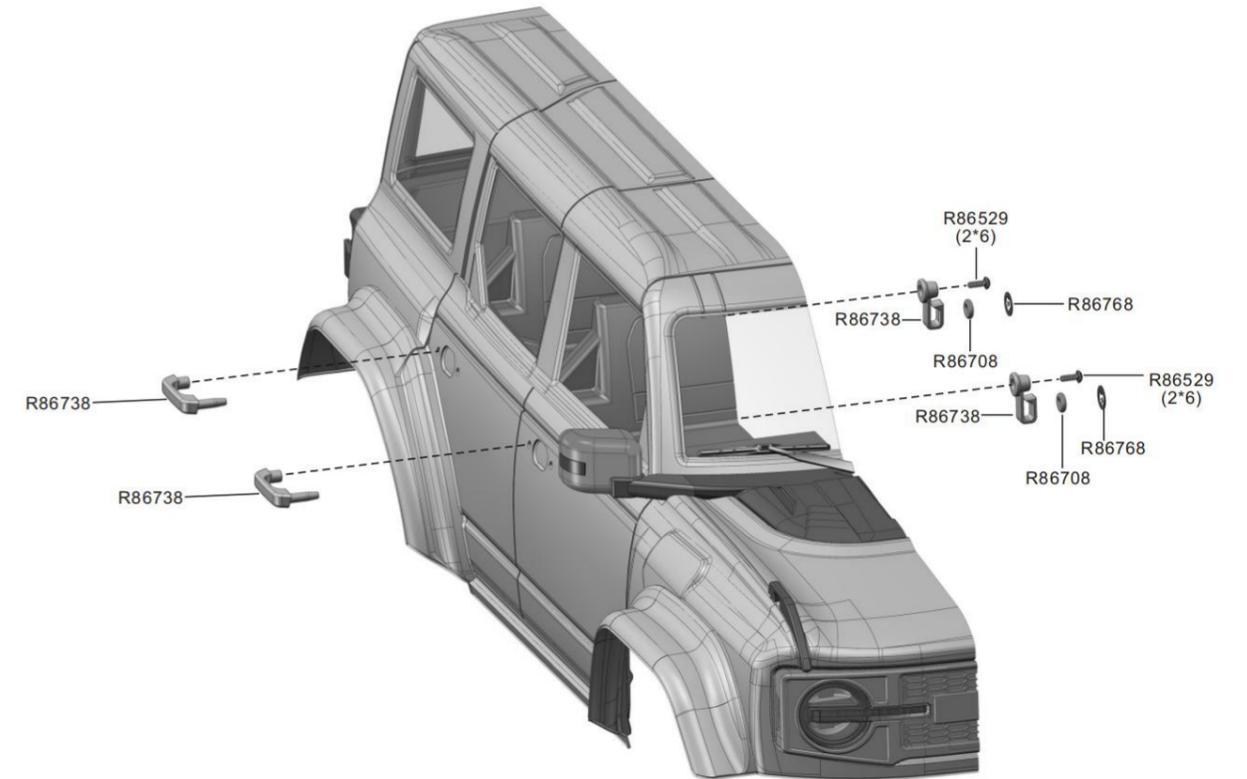

Body Assembly-6

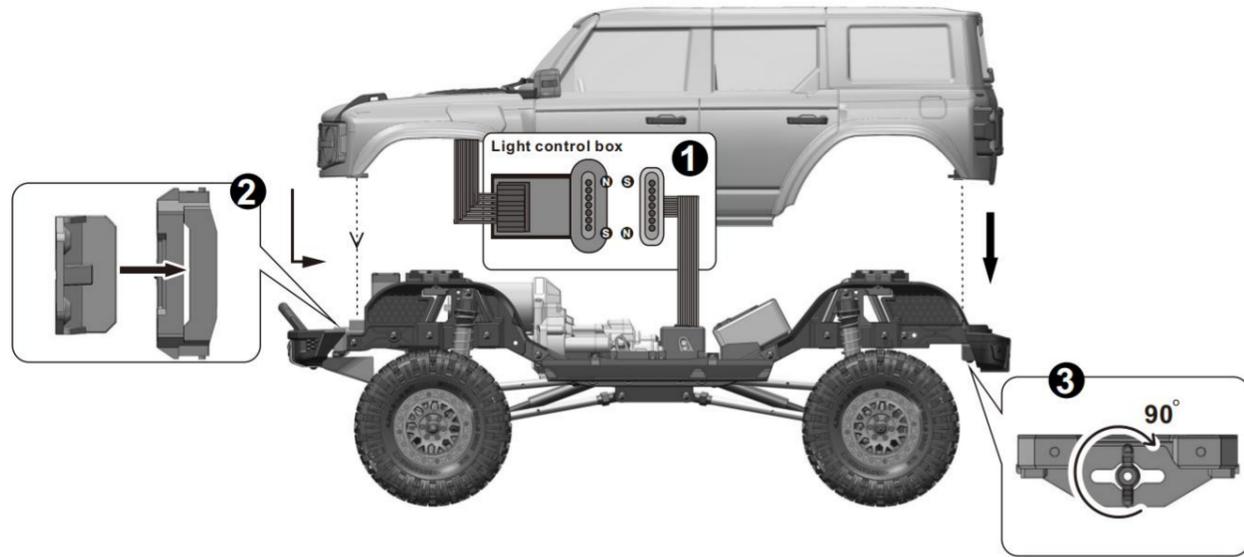

Spare Part

R86716 	R86717 	R86718 	R86719 	R86720
R86721 	R86722 	R86723 	R86724 	R86725
R86017 	R86726 	R86727 	R86728 	R86729
R86730 	R86474 		R86708 	






Spare Part

R86731 	R86710 	R86732 	R86733 	R86734
R86735 	PC body+Sticker 		Pre-Assembled PC Body 	
R86737 	R86738 	R86739 		
R86743 	R86741 	R86742 	R86744 	
R86745 	R86746 	R86747 	R86748 	R86749
R86750 	R86751 	R86501 	R86504 	R86752
R86675 	R86676 	R86677 	R86705 	R86506

Spare Part

R86507  Gear Stick	R86187  Sping	R86514  Slipper Spacer/Plate	R86753  Winch Tube	R86754  Drive Axle
R86680  Gear Shaft	R86755  Straight Shaft Holder	R86756  Rear Shaft	R86757  Joint Rotation Driveshaft Short Long	R86681  Transmission Axle
R86682  Torque limit shaft	R86683  Transmission Block Axle 32.2mm	R86684  Dig Block Axle 37.3mm	R86685  Dig Axle	R86686  Distributor Axle
R86428  Ball Bearing Ø4*Ø8*3	R86047  Ball Bearing Ø5*Ø10*4	R86812  Ball Bearing Ø5*Ø11*4	R86759  Ball Bearing Ø7*Ø14*3.5	R86760  Ball Bearing Ø5*Ø14*5
R86046  Ball Bearing Ø10*Ø15*4	R86048  Ball Stand Ø5.9mm(Short)	R86049  Ball Stand Ø5.9mm (Long)	R86761  Ball Stand Ø5.9mm	R86762  Shock Balls
R86689  Nylon Nut M2	R86528  Nylon Nut M2.5	R86051  Nylon Nut M3	R86052  Flange M4 Lock Nut	R86381  Button Head 2.5*8
R86443  Button Head 3*4	R86058  Button Head 3*6mm	R86059  Button Head 3*8mm	R86060  Button Head 3*10mm	R86061  Button Head 3*12mm

 

Spare Part

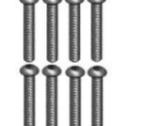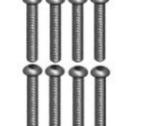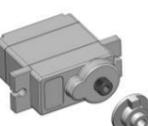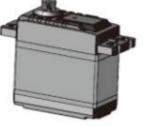R86062  Button Head 3*14mm	R86063  Button Head 3*16mm	R86064  Button Head 3*18mm	R86065  Button Head 3*20mm	R86376  Button Head 3*22mm
R86066  Button Head 3*25mm	R86067  Button Head 3*28mm	R86529  Button Head Self-tapping 2*6mm	R86530  Step Screws 4*11.5mm	R86365  Cap Head 2*5mm(Silver)
R86289  Cap Head 2*8mm	R86693  Cap Head 2.5*18mm	R86763  Cap Head 2.5*20mm	R86694  Flat Head 2*8mm	R86068  Flat Head 3*8mm
R86321  Flange Head Screws 3*4	R86054  Crub Screw Bolt 4*4mm	R86764  Crub Screw Bolt 3*20mm	R86537  Metal Washer Ø2.6*Ø6*0.5	R86695  Metal Washer (3*7*0.8)
R86696  Gasket (5.1*6.5*3)	R86057  Gasket (5.2*6.5*2)	R86594  E-Clips-Ø2.3mm*6P E-Clips-Ø4mm*6P	R86758  Wheel Hex.	R86045  King Pin Bushing
R86706  Pin -2*10mm*6P Pin -2*7.5mm*6P Pin -2*12mm*6P	R86768  clip kits (12pcs)	R86661  Winch Spool	R86700  Alloy Wire Clip Steel Wire+Wire Hook	R86539  Dig Servo 9G /7.4V
R86688  Winch Servo 25KG(360°)	R86540  Steering Servo 25KG	R86541  Servo Horn (25T)	R86697  Motor-550/6235	R86338  ESC -60A

Spare Part

X8E(GS08)-150	X6DC	R86765	R86769
 Radio/Receiver	 Receiver	 Light set	 Magnetic Adapter Cable

 Optionals Part

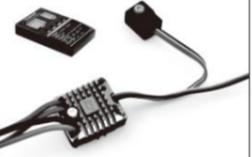R86621	R86624	R86625	R86571	R86770
 "Hobbywing QUICRUR" 80A custom crawler ESC and 570-35 T crawler motor. Upgrade power Kit	 RGT crawler motor 570/35T	 ESC-80A	 Crawler Battery (7.4V6200mAh/Plug:T)	 9g/7.4v servo with metal gear
R86740	R86766	P860065	P860066	P860122
 Spare Tire Mount	 Wheel Complete	 Wheel (AL.)	 Wheel (AL.)	 Motor Mount(AL.)
P860123	P860124	P860125	P860126	P860127
 Axle Servo Brace(AL.)	 Gearbox Plate(AL.)	 Rear Axle L/R Housing Weight Set 80g	 Steering Mount L/R Housing Weight Set 108g	 Gear Boxlid Housing Weight Set 41g
P860128				
 Steering Mount L/R Housing Weight Set 45.5g				



PRODUCT QUALIFICATION CERTIFICATION

Remote control models are specialized and high-value products. If you identify any quality defects upon receipt, please do not use the product and contact the seller immediately to arrange a replacement or return. Please note that we cannot provide any after-sales guarantee for damages which are caused by improper use.

The product conforms to technical requirements of export safety regulations.

Factory Address: Huang Jiang Town, Dong Guan City, Guang Dong Province, China
Website: [www. RGT-RACING. Com](http://www.RGT-RACING.Com)

Production Date: refer to packing instruction